



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	1552	3911A 3	DRIVE SHAFT HOUSING ASSEM	1		
1	1551	3918A 3	DRIVE SHAFT HOUSING ASSEM	1		
2	16	56295	STUD, DRIVE SHAFT HOUSING	2		
3	19	32297	PLUG, PLASTIC - TRIM TAB SCI	1		
4	10	48409	SCREW, RETAINING STRIP TO	2		
5	10	48408	SCREW, RETAINING STRIP TO	6		
6		37417	COVER, TRIM - DRIVE SHAFT HC	1		
7	10	37571	SCREW, TRIM COVER TO BOTTO	4	SERIAL 00000000-02940020	
7	10	57807	SCREW, TRI COVER TO BOTTO	4	SERIAL 02940021-09999999	
	25	57806	GROMMET, PLASTIC - TRIM COV	4	SERIAL 02940021-09999999	
8		37919	SEAL, TRIM COVER TO DRIVE SH	1		
9		37665	STRIP, RETAINING - TRIM COVE	2		
10		38052	STRIP, RETAINING - TRIM COVE	1		
11	32	37446	TUBE, WATER INLET (SHORT SH	1		
11	32	37438	TUBE, WATER INLET (LONG SHA	1		
12		38469	TUBE, EXHAUST (SHORT SHAFT)	1		
12		38470	TUBE, EXHAUST (LONG SHAFT)	1		
13	10	28668	SCREW, TUBE TO EXTENSION F	2	SERIAL 00000000-02843223	
13	10	38601	SCREW, TUBE TO EXTENSION F	2	SERIAL 02940021-02942990	
13	10	59702	SCREW, TUBE TO EXTENSION F	2	SERIAL 03036066-09999999	
14	11	46886	NUT, EXHAUST TUBE SCREW	2	SERIAL 00000000-02940020	
14	11	29322	NUT, EXHAUST TUBE SCREW	2	SERIAL 02940021-09999999	
15	11	35814	NUT, POWERHEAD STUDS (5/16	2		
16	11	20509	NUT, POWERHEAD STUDS (3/8-	2		
16	11	23161	NUT, POWERHEAD STUDS (3/8-	6		
17	12	20086	WASHER, POWERHEAD STUDS	2		
18	27	48801	GASKET, EXHAUST EXTENSION	1		
19		52887	GUIDE, PUSH ROD - REVERSE L	1		
20		47591	ROD, PUSH - REVERSE LOCK (S	1		
20		47558	ROD, PUSH - REVERSE LOCK (L	1		
21	11	47661	NUT, JAM - PUSH ROD	1		
22		47559	YOKE, PUSH ROD	1		
23	17	39023	PIN, PUSH ROD TO REVERSE LC	1		
24	18	25191	COTTER PIN, PUSH ROD PIN	1		
25		37398	MOUNT, RUBBER - UPPER	2		
25		38820	MOUNT, RUBBER - UPPER (HEA)	OPT		
26		49239	COVER, UPPER MOUNT - OUTSI	2		
27		53141	COVER, UPPER MOUNT - INSIDE	2		
28		24949	PACKING, "U" CUP	2		
29	10	28773	SCREW, UPPER MOUNT COVER	4		
30	10	28775	SCREW, UPPER MOUNT COVER	4		