



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
-	1623	3909A 5	GEAR HOUSING ASSEMBLY, CO	1	A-1623-3909A3 AND A5 GEAR HI	
-	1623	3909A 3	GEAR HOUSING ASSEMBLY, CO	1	A-1623-3909A3 AND A5 GEAR HI	
1	1623	3909A 6	GEAR HOUSING ASSEMBLY (SI	1		
54		54346	CAM, SHIFT	1		
55		30625	FOLLOWER, CAM	1		
56		30624	SLIDE, CROSS PIN	1		
57	24	30622	SPRING, COMPRESSION - CAM	1		
58	15	30923A 1	SHIM, BEARING OUTER RACE	AR		
59	31	30894A 1	TAPERED ROLLER BEARING A	1		
60	31	30895	BEARING, ROLLER - FORWARD	1		
61	43	57011	FORWARD GEAR ASSEMBLY	1		
62	52	34239	RATCHET, SLIDING CLUTCH	1		
63	17	30632	PIN, CROSS - RATCHET TO PR	1		
64	24	30893	SPRING, RETAINING - CROSS F	1		
65	44	52542	SHAFT, PROPELLER	1		
66	43	55689	REVERSE GEAR ASSEMBLY	1		
67	15	29955A 1	SHIM, THRUST WASHER TO G	AR		
68	12	30633	WASHER, THRUST - BEARING	1		
69	30	31265	BEARING, BALL - REVERSE GE	1		
70	25	29976	"O" RING, BEARING CARRIER	1		4
71		52132A 1	BEARING CARRIER ASSEMBLY	1		
72	31	30956	BEARING, ROLLER - BEARING	1		
73	26	30550	OIL SEAL, BEARING CARRIER	2		
74	28	30281	KEY, LOCATING - BEARING CAF	1		
75	14	52700	TAB WASHER, GEAR HOUSING	1		
76		52699	COVER, GEAR HOUSING	1		
77		31640A 1	TRIM TAB, GEAR HOUSING	1		
78	10	55726	SCREW, TRIM TAB TO GEAR H	1		
79	12	45176	WASHER, GEAR HOUSING TO D	2		
80	11	34933	NUT, GEAR HOUSING TO DRIVE	2		
81	10	34353	SCREW, GEAR HOUSING TO DR	1		
82		46961A 1	THRUST HUB AND WASHER AS:	1	PART OF A-1623-3909A3 AND A5	
83	12	29590	WASHER, CUPPED - THRUST	1	PART OF A-1623-3909A3 AND A5	
84	12	31211	WASHER, SPLINED - PROPELLE	1		
85	14	31210	TAB WASHER, PROPELLER NUT	1		
86	11	52707	NUT, PROPELLER (1		