



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		52769	WIRING HARNESS, INTERNAL	1		
2		30050	TERMINAL, HARNESS AND ME	AR		
3	54	52876	CLAMP, WIRING HARNESS TO B	1		
4	10	45862	SCREW, WIRING HARNESS CLAI	2		
5	13	26996	LOCKWASHER, WIRING HARNE	2		
6	12	20128	WASHER, WIRING HARNESS CL	2		
7	24	28975	SPRING, GARTER - INTERNAL W	1		
8	10	20776	SCREW, GROUND WIRE TO BOT	1		
9	13	24669	LOCKWASHER, GROUND WIRE	1		
10	25	26547	GROMMET, RECTIFIER TO SWIT	1		
11	54	26538	CLIP, WIRING HARNESS TO FRO	1		
12	10	30663	SCREW, WIRING HARNESS TO F	1		
13		22789	"D" WASHER, WIRING HARNE	1		
14		45559	TERMINAL BLOCK, STATOR LEA	1		
15	10	35519	SCREW, TERMINAL BLOCK FAST	2		
16	10	30663	SCREW, STATOR LEADS TO TEF	2		
17	332	2986A 4	SWITCH BOX ASSEMBLY	1		
18	12	45075	WASHER, SWITCH BOX TERMIN	7		
19	11	45076	NUT, SWITCH BOX TERMINAL	7		
20	10	45218	SCREW, SWITCH BOX (3/8")	1		
21	10	24866	SCREW, SWITCH BOX TO FRON	4		
22	11	46887	NUT, SWITCH BOX SCREW	4		
23		25596	CABLE, WIRE - STARTER MOTO	1		
24	10	29197	SCREW, WIRE CABLE TO START	1		
25		57247	STOP, RUBBER - STARTER MOT	1		
26	23	56774	SPACER, COLLAR TO TOP MOUN	AR		
27		56703	COLLAR, RUBBER - STARTER MI	2		
28	50	57465A 1	STARTER MOTOR ASSEMBLY	1		
29	13	26992	LOCKWASHER, STARTER MOTO	1		
30	11	20890	NUT, STARTER MOTOR TERMIN	1		
31		25661	SOLENOID, STARTER	1		
32	10	21625	SCREW, SOLENOID TO COIL BR	2		
33	13	26992	LOCKWASHER, STARTER SOLE	2		
34		26901	BUMPER, RUBBER - STARTER S	1		
35	13	26996	LOCKWASHER, SOLENOID TERN	2		
36	11	20645	NUT, SOLENOID TERMINAL (#10	2		
37		48396	CABLE, WIRE - STARTER MOTO	1		
38	13	26993	LOCKWASHER, SOLENOID TERN	2		
39	11	20083	NUT, SOLENOID TERMINAL (5/1	2		
40		46265	BOOT, SOLENOID TERMINAL	1		
41	222	2810A 2	RECTIFIER ASSEMBLY	1		