



A = With Tab  
 B = With Out Tab

11958

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
32		814283A 2	BRACKET ASSEMBLY	1		
33		98889	LATCH	1		
34	10	42975	SCREW, Drive	2		
35		39519	CUP	1		
36		52100	WEAR PLATE	1		
37		38279	LATCH	1		
38	12	35462	WASHER, (.2656 x .625 x .0625)	1		
39	11	35045	NUT, (.250-28)	1		
40	10	53167	SCREW, (.312-18 x .880)	3		
41		814284	GUIDE BLOCK	1		
42	24	20099	SPRING	1		
43		67073A 1	LINK ROD ASSEMBLY	1		
44		79932A11	SHIFT SHAFT ASSEMBLY	1	(Long) (Use With Reference #46; With T	
44		79932A12	SHIFT SHAFT ASSEMBLY	1	(X-Long) Use With Reference #46	
45		NSS	NOT SOLD SEPARATE, Shift Le	1	(Use With Reference #46; With T	7
46	23	26600	BUSHING	1	(Use With Reference #46; With T	
44		79932A16	SHIFT SHAFT ASSEMBLY	1	(Long) (Use With Reference #46; With T	
44		79932A17	SHIFT SHAFT ASSEMBLY	1	(X-Long) Use With Reference #46; With T	
45		NSS	NOT SOLD SEPARATE, Shift Sh	1	(Use With Reference #46; Withou	7
46	23	26856	BUSHING	1	(Use With Reference #46; Withou	
47	13	29720	WAVE WASHER	1		
48	12	35462	WASHER, (.2656 x .625 x .0625)	1		
49	11	35045	NUT, (.250-28)	1		
50	87	814281A 1	IDLE STABILIZING SHIFT KIT	1	(XR6/175 Magnum III)	
51	10	77478	SCREW, (#6-32 x .875)	2	(XR6/175 Magnum III)	
52	12	27882	WASHER	2	(XR6/175 Magnum III)	
53		17461A 3	RESISTOR MODULE	1	(XR6/175 Magnum III)	