

NO IMAGE

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
0	84	815366A	BATTERY ISOLATOR KIT	1	(ELECTRICAL/IGNITION)	
0	91	58222A	DIAL INDICATOR TOOL	1	(ELECTRICAL/IGNITION)	
0	91	89045	ADAPTOR TOOL	1	(ELECTRICAL/IGNITION)	
0	91	52344	HOLDER TOOL	1	(ELECTRICAL/IGNITION)	
0	91	849154T	PULLER ASSEMBLY	1	(ELECTRICAL/IGNITION)	
0	91	99750A	MULTI METER	1	(ELECTRICAL/IGNITION)	
0	91	24161	CAP TOOL, Flywheel Puller	1	(ELECTRICAL/IGNITION)	
0	91	52024A	SWITCH ASSEMBLY	1	(ELECTRICAL/IGNITION)	
0	91	59339	SERVICE TACHOMETER	1	(ELECTRICAL/IGNITION)	
0	91	850439T	TESTER, EIGHT CHAMBER	1	(ELECTRICAL/IGNITION)	
0	91	63998A	GAP TOOL, SINGLE CHAMBER	1	(ELECTRICAL/IGNITION)	
0	91	14443A	TEST HARNESS	1	(ELECTRICAL/IGNITION)	
0	91	99379	TIMING LIGHT	1	(ELECTRICAL/IGNITION)	
0	91	29287	GAUGE TOOL	1	(POWERHEAD)	
0	91	55919	SLEEVE	1	(POWERHEAD)	
0	91	52344	HOLDER TOOL	1	(POWERHEAD)	
0	91	849154T	PULLER ASSEMBLY	1	(POWERHEAD)	
0	91	90455T	LIFTING EYE	1	(POWERHEAD) SN# 0T979999 &	
0	91	90455	LIFTING EYE	1	(POWERHEAD) SN# 0T980000 &	
0	91	77109A	INSTALLER KIT	1	(POWERHEAD)	
0	91	52952T	REMOVAL TOOL, Piston Pin Lock	1	(POWERHEAD)	
0	91	74607A	INSTALLER KIT, Piston Pin	1	(POWERHEAD)	
0	91	65494T	RING COMPRESSOR TOOL	1	(POWERHEAD)(2.0L)	
0	91	818773T	COMPRESSOR TOOL	1	(POWERHEAD)(2.5L)	
0	91	24697	EXPANDER TOOL, Piston Ring	1	(POWERHEAD)	
0	91	30591T	STAND TOOL	1	(POWERHEAD)	
0	91	24161	CAP TOOL, Flywheel Puller	1	(POWERHEAD)	
0	91	66274	TORQUE WRENCH, (0-150 lb-in) (I	1	(POWERHEAD)	
0	91	37241	PULLER PLATE	1	(POWERHEAD)	
0	91	11230	ALIGNMENT TOOL	1	(TRIM/TILT SYSTEM)	
0	91	99750A	MULTI METER	1	(TRIM/TILT SYSTEM)	
0	91	52915A	TEST GAUGE KIT	1	(TRIM/TILT SYSTEM)	
0	91	74951	SPANNER WRENCH	1	(TRIM/TILT SYSTEM)	
0	91	63209	HEAT LAMP	1	(TRIM/TILT SYSTEM)	
0	91	44487T	REMOVER TOOL, Trim Rod Guide	1	(TRIM/TILT SYSTEM)	
0	91	44486A	REMOVAL TOOL, Trim Rod	1	(TRIM/TILT SYSTEM)	