



Parts List					Qty	Comment	Footnote
Ref	Class	Part	Description				
1	1573	5239A 4	DRIVE SHAFT HOUSING ASSEM	1			
2	16	56295	STUD	2	DRIVE SHAFT HOUSING TO GE		
3	19	64649	PLUT, PLASTIC - TRIM TAB SC	1			
5		37417	COVER, TRIM - DRIVE SHAFT HC	1			
6	10	57807	SCREW, TRIM COVER TO BOTTC	4			
6A	25	57806	GROMMET, PLASTIC - TRIM COV	4			
6B		46933A 2	GROUND STRAP ASSEMBLY, TR	2			
6C	10	62568	SCREW, GROUND STRAP ATTA	2			
7	32	60897	TUBE, WATER INLET	1			
8		78184	TUBE, EXHAUST	1			
8A		65638	BOOT, TUBE MOUNT	2			
11	11	69254	NUT, POWERHEAD STUDS (3/8-	2			
12	12	25970	WASHER, POWERHEAD STUDS	2			
14		52887	GUIDE	1	PUSH ROD - REVERSE LOCKIN		
15		47558	ROD	1	PUSH - REVERSE LOCK (NOT U		
16	11	47661	NUT	1	JAM - PUSH ROD (NOT USED \		
17		47559	YOKE, PUSH ROD	1	(NOT USED WITH POWER TRIM		
19	18	25191	COTTER PIN	1	PUSH ROD PIN (NOT USED WI		
20		75296	MOUNT, RUBBER - UPPER	2			
21	12	47840	WASHER, RUBBER - UPPER MOI	2			
22	12	31263	WASHER, UPPER MOUNT BOLT	2			
23	11	34933	NUT, UPPER MOUNT BOLT	2			
24		75299	MOUNT, RUBBER - LOWER	2			
25	10	49318	SCREW, LOWER MOUNT (5 1/2"	2			
26	12	49339	WASHER, LOWER MOUNT SCRE	2			
27	11	25096	NUT, LOWER MOUNT SCREW	2			
28		25067	BUMPER, RUBBER - LOWER MO	2			
30	11	34933	NUT	2	GEAR HOUSING AND DRIVE SH		
31	12	45176	WASHER	2	GEAR HOUSING TO DRIVE SHA		
32	11	29489	NUT	1	GEAR HOUSING AND DRIVE SH		
33	12	45176	WASHER	1	GEAR HOUSING TO DRIVE SHA		
34		35608	CLAMP	2	LOWER MOUNT TO DRIVE SHA		
35	24	35522	SPRING, TENSION - LOWER MOI	4			
36	10	29256	SCREW	4	LOWER MOUNT CLAMP TO DRI		
37		35474	COVER, LOWER MOUNT CLAMP	2			
38	11	35521	NUT, LOWER MOUNT CLAMP CC	2			
39	10	29722	SCREW, COVER TO LOWER CLA	2			