



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	2115	6462	COWL, BOTTOM	1		
2		52862A	DRIP TRAY ASSEMBLY, BOTTOM	1		
3		37940	PAD, SOUND - TRIP TRAY	1		
4	10	48408	SCREW, DRIP TRAY TO BOTTOM	4		
5	32	34395A	HOSE, DRIP TRAY TO BOTTOM (	1		
6		39616	BOOT, CONTROL CABLES - BOT	1		
7		76369	SPACER, BOTTOM COWL (COWL	1		
8	10	48591	SCREW, SPACER TO BOTTOM C	2		
9		37637	BOOT, FUEL CONNECTOR - BOT	1		
10		37445	SUPPORT, WIRING HARNESS - E	1		
11	10	69029	SCREW, SUPPORT TO BOTTOM	2		
11A	11	36069	NUT, SUPPORT SCREW	2		
13	32	34395A	HOSE	1	TELL TALE - EXHAUST COVER	
14		52889	NOZZLE, TELL TALE HOSE TO B	1		
15	10	48408	SCREW	1	TELL TALE NOZZLE TO BOTTOI	
16	22	78279	ELBOW, TELL TALE HOSE TO CY	1		
17		60304A54	SHIFT SHAFT ASSEMBLY, UPPER	1		
18	23	26600	BUSHING, SHIFT SHAFT	1		
20		48047A	LINK ROD ASSEMBLY	1		
21	12	35462	WASHER, LINK ROD	2		
22	11	20664	NUT, LINK ROD	2		
23	13	29720	WASHER, WAVE - LINK ROD	1		
24		52732	BRACKET, ANCHOR - CONTROL	1		
25		39519	CAP, BARREL RETAINER - ANCH	1		
26		39618	LEVER, NYLON - SHIFT CABLE L	1		
27	17	47175	PIN, LOCKING LEVER AND COVE	3		
28		39667	COVER, NYLON - SHIFT CABLE	1		
29		65799	LINK, LOCKING LEVER TO COVE	1		
30	10	24234	SCREW	3	ANCHOR BRACKET TO CYLINDE	
31	24	20099	SPRING, LINK ROD TO GUIDE BL	1		
32		37896	GUIDE BLOCK, LINK ROD	1		
33		52100	WEAR PLATE, LINK ROD	1		
34		38279	LATCH	1	CONTROL CABLE FASTENING -	