



				Parts List		
Ref	Class	Part	Description	Qty	Comment	Footnote
1		89748	PLATE, ELECTRICAL MOUNTING	1		
2	10	86885	SCREW, PLATE TO CYLINDER BI	4		
2	10	28636	SCREW, PLATE TO CYLINDER BI	3		
2	10	45561	SCREW, PLATE TO CYLINDER BI	2		
3	12	29245	WASHER, PLATE SCREW	7		
4	87	33386A 3	SWITCH ASSEMBLY, MERCURY	1		
5	10	25764	SCREW, MERCURY SWITCH TO	1		
6	11	45076	NUT, WIRE TO MERCURY SWIT	1		
7		62351A 1	RECTIFIER ASSEMBLY	1		
8	10	25764	SCREW, RECTIFIER TO IGNITIO	2		
9	11	45076	NUT, RECTIFIER TERMINALS	3		
10	89	76545	SOLENOID, STARTER	1		
11	10	38601	SCREW, STARTER SOLENOID TI	2		
12	13	26992	LOCKWASHER, STARTER SOLEI	2		
13	13	26996	LOCKWASHER, SOLENOID TER	2		
14	11	68219	NUT, SOLENOID TERMINALS (10	2		
15	13	26993	LOCKWASHER, SOLENOID TER	2		
16	11	68292	NUT, SOLENOID TERMINALS (5/	2		
17		46265	BOOT, TERMINAL - STARTER SC	1		
18		90547	LOCATOR, STARTER SOLENOID	1		
19	84	88439A 3	BATTERY CABLE ASSEMBLY (PO	1		
19	84	88439A 4	BATTERY CABLE ASSEMBLY (NE	1		
20	84	89564A 1	WIRING HARNESS (INTERNAL)	1		
21	54	88608	CLAMP, WIRING HARNESS	1		
22	10	28636	SCREW, WIRING HARNESS CLAI	2		
23	13	26996	LOCKWASHER, WIRING HARNE	2		
24		89047	BRACKET, WIRING HARNESS	1		
25	10	65384	SCREW, WIRING HARNESS BRA	2		
26	12	38833	WASHER, BRACKET SCREW	2		
27	11	45812	NUT, BRACKET SCREW	2		
28		88751	CLAMP, WIRING HARNESS	1		
29	10	28636	SCREW, WIRING HARNESS CLAI	1		
30	12	20533	WASHER, CLAMP SCREW	1		
31	332	7778A 3	SWITCH BOX ASSEMBLY	2		
32	10	20619	SCREW, SWITCH BOX ATTACHI	4		
33	23	90224	SPACER, SWITCH BOX SCREW	4		
34	84	60871A10	WIRE ASSEMBLY, SWITCH BOX	2		
35	10	62568	SCREW, WIRE ATTACHING	2		
36	84	62310A 3	CABLE ASSY	1	SWITCH BOX TO SWITCH BOX I	
37	11	45076	NUT, SWITCH BOX TERMINAL	20		
38	229	7220A 2	COIL ASSEMBLY, IGNITION	1		