



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	84	69236	WIRING HARNESS, INTERNAL	1		
3	54	76368	CLAMP, WIRING HARNESS TO B	1		
4	10	69020	SCREW	2	WIRING HARNESS CLAMP TO B	
5	13	26996	LOCKWASHER, WIRING HARNE	2		
6	12	30164	WASHER, WIRING HARNESS CL	2		
7	24	28975	SPRING, GARTER - INTERNAL	1		
8	10	69052	SCREW, GROUND WIRE TO BOT	1		
9	13	26992	LOCKWASHER, GROUND WIRE	1		
10	54	26538	CLIP, STATOR LEADS TO BLOCK	1		
11	10	62568	SCREW	1	WIRING HARNESS TO FRONT E	
12		69205	"D" WASHER, WIRING HARNESS	1		
13		45559	TERMINAL BLOCK, STATOR LEA	1		
14	10	62568	SCREW	4	STATOR LEADS TO TERMINAL	
15	332	2986A21	SWITCH BOX ASSEMBLY	1		
16	11	45076	NUT, SWITCH BOX TERMINAL	7		
17	10	29794	SCREW, SWITCH BOX (3/8")	1		
18	10	64279	SCREW	4	SWITCH BOX TO FRONT MOUN	
19	11	46887	NUT, SWITCH BOX SCREW	4		
20		54651	CABLE	1	WIRE - STARTER MOTOR TO FF	
21	10	69035	SCREW, WIRE CABLE TO START	1		
22		57247	STOP, RUBBER - STARTER MOT	2		
23	23	56774	SPACER, COLLAR TO TOP MOUN	AR		4
24		56703	COLLAR, RUBBER - STARTER MI	2		
25	50	72467	STARTER MOTOR ASSEMBLY	1		
26	13	26992	LOCKWASHER, STARTER MOTD	1		
27	11	64015	NUT, STARTER MOTOR TERMIN	1		
28	89	68258	SOLENOID, STARTER	1		
29	10	38601	SCREW, SOLENOID TO BOTTOM	2		
30	13	26992	LOCKWASHER	2	STARTER SOLENOID FASTENIN	
31		26901	BUMPER, RUBBER - STARTER S	1		
32	13	26996	LOCKWASHER, SOLENOID TERM	2		
33	11	68219	NUT, SOLENOID TERMINAL (#10	2		
34	84	69237	CABLE, WIRE - STARTER MOTOF	1		
35	13	26993	LOCKWASHER, SOLENOID TERM	2		
36	11	68292	NUT, SOLENOID TERMINAL (5/1)	2		
37		46265	BOOT, SOLENOID TERMINAL	1		
38		62351A	RECTIFIER ASSEMBLY	1		
39	10	37656	SCREW, RECTIFIER TO FRONT E	2		
42	11	45076	NUT, STATOR LEADS TO RECTIF	3		