



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		76395A 5	HYDRAULIC PUMP ASSEMBLY	1	(SEE NOTE BELOW)	
2	25	21720	"O" RING, HYDRAULIC PUMP T	4		
3	10	28634	SCREW, FILLER - HYDRAULIC I	1		
4	12	20260	WASHER	1	SEALING - HYDRAULIC PUMP FI	
5	10	38257	SCREW, VENT - HYDRAULIC PI	1		
7		32979	BATTERY LEAD (POSITIVE)	1		
8		32988	BATTERY LEAD (NEGATIVE)	1		
9		45336	PLATE, MANIFOLD	1		
10		45197A 2	CONTROL VALVE ASSEMBLY	1		
10	25	21720	"O" RING	4	PUMP TO MANIFOLD PLATE (SE	
11	25	45254	"O" RING	1	CONTROL VALVE TO MANIFOLD	
12	25	21720	"O" RING	1	CONTROL VALVE TO MANIFOLD	
13	25	45253	"O" RING	2	CONTROL VALVE TO MANIFOLD	
14	10	56500	SCREW	4	VALVE AND MANIFOLD PLATE T	
15	13	26992	LOCKWASHER	4	CONTROL VALVE AND MANIFOL	
17	22	46008	PLUG, CONTROL VALVE (1/2-20"	2		
18	84	74023	CONNECTOR AND HARNESS	1		
22		45377	BRACKET	2	MOUNTING - HYDRAULIC PUMP	
23	10	24234	SCREW	4	MOUNTING BRACKET TO HYDF	
24	13	39107	LOCKWASHER, MOUNTING BRA	4		
25	11	21908	NUT, MOUNTING BRACKET SCR	4		
26	10	68298	BOLT, HYDRAULIC PUMP TO BO.	2		
27	11	68411	NUT, HYDRAULIC PUMP BOLT	2		
28	89	68258	STARTER SOLENOID	2		
29	13	26996	LOCKWASHER	4	STARTER SOLENOID TERMINA	
30	11	68219	NUT, STARTER SOLENOID TER	4		
31	13	26993	LOCKWASHER	4	STARTER SOLENOID TERMINA	
32	11	68292	NUT, STARTER SOLENOID TER	4		
33		46265	BOOT, RUBBER - STARTER SOLI	4		
34		74407	BRACKET, MOUNTING - STARTE	1		
35	10	21140	SCREW	2	MOUNTING BRACKET TO HYDF	
36	13	26992	LOCKWASHER, MOUNTING BRA	2		
37	11	24656	NUT	1	MOUNTING BRACKET TO HYDF	
38		26901	BUMPER, RUBBER - SOLENOID E	1		
39		55991	BATTERY LEAD (POSITIVE)	1		
39		55992	BATTERY LEAD (NEGATIVE)	1		
40		74406	BRACKET, MOUNTING - STARTE	1		
41	10	69028	SCREW	2	MOUNTING BRACKET TO HYDF	
42	13	26992	LOCKWASHER, MOUNTING BRA	2		
43	10	34290	SCREW	2	STARTER SOLENOID TO MOUN	
44	13	26992	LOCKWASHER, STARTER SOLE	2		