



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	2115	3919	COWL, BOTTOM	1		
2		52862A	DRIP TRAY ASSEMBLY, BOTTOM	1		
3		37940	PAD, SOUND - DRIP TRAY	1		
4	10	35519	SCREW, DRIP TRAY TO BOTTOM	4		
5	32	34395A	HOSE, DRIP TRAY TO BOTTOM (1		
6		39616	BOOT, CONTROL CABLES - BOT	1		
7		48231	SPACER, BOTTOM COWL (COWL	1		
8	10	48591	SCREW, SPACER TO BOTTOM C	2		
9		37637	BOOT, FUEL CONNECTOR - BOT	1		
10		37445	SUPPORT, WIRING HARNESS - E	1		
11	10	37990	SCREW, WIRING HARNESS SUP	1		
11	10	31471	SCREW, WIRING HARNESS SUP	1		
12	11	46887	NUT, WIRING HARNESS SUPPO	2		
13	32	34395A	HOSE, TELL TALE - EXHAUST CC	1		
14		52889	NOZZLE, TELL TALE HOSE TO B	1		
15	10	35519	SCREW, TELL TALE NOZZLE TO	1		
16	22	25885	ELBOW, TELL TALE HOSE TO EX	1		
17	27	60479	GASKET, CYLINDER BLOCK TO E	1		4
18		60432A	PLATE ASSEMBLY, EXHAUST EX	1		
19		37918	SEAL, EXHAUST EXTENSION F	1		
20		38032	STRIP, RETAINING - EXHAUST	1		
21	10	37571	SCREW, SEAL AND RETAINING	5		
21A	10	62644	SCREW, ADAPTOR PLATE ATTA	1		
21B	13	26993	LOCKWASHER, ADAPTOR PLATE	1		
22	27	60945	GASKET, EXHAUST EXTENSION	1		4
23	12	20722	WASHER, DRIVE SHAFT HOUSIN	7		
24	11	25594	NUT, DRIVE SHAFT HOUSING S	7		
25	26	60898	SEAL, DRIVE SHAFT HOUSING P	1		
26		60434A	PLATE ASSEMBLY, DRIVE SHAF	1		
27	26	38970	SEAL, RUBBER - WATER INLET	1		4
28	27	62362	GASKET, MEGAPHONE TO DRIV	1		4
29	12	25970	WASHER, CYLINDER BLOCK STL	6		
30	11	23161	NUT, CYLINDER BLOCK STUD	6		
31		60437	MEGAPHONE, EXHAUST	1		
32	10	60480	SCREW, MEGAPHONE TO DRIVE	3		
33	13	26992	LOCKWASHER, MEGAPHONE SC	3		
34		60304A	SHIFT SHAFT ASSEMBLY, UPPE	1		
34		60304A10	SHIFT SHAFT ASSEMBLY, UPPE	1		
35	23	26600	BUSHING, SHIFT SHAFT	1		
36		55692	COUPLING, SHIFT SHAFT	1		
37		48047A	LINK ROD ASSEMBLY	1		