



Parts List					Qty	Comment	Footnote
Ref	Class	Part	Description				
1	393	3736A23	HOUSING ASSEMBLY, DISTRIBU	1			
2		32197	STOP, SPARK ADVANCE - DISTR	1			
3	17	27962	PIN, ANCHOR SPRING - DISTRIB	1			
4	24	27944	SPRING, HORSESHOE - DISTRIB	1			
5	12	53540	WASHER, ECONOMIZER COLLA	1			
6		55804A	ECONOMIZER COLLAR ASSEMBL	1			
7	17	27961	PIN, ECONOMIZER COLLAR - S	1			
8	22	25094	FITTING, GREASE - ECONOMIZ	1			
9		27947	SWIVEL, LINKAGE - ECONOMIZE	1			
10		25996A	SWIVEL AND LINK ROD ASSEMB	1			
11	11	25168	NUT, UPPER LINK ROD ADJUSTI	1			
12		37700	ROD, LINK - UPPER	1			
13		27948	SWIVEL, UPPER LINK ROD TO T	1			
14		60478	LEVER, THROTTLE CONTROL	1			
15	13	25806	WASHER, WAVE - THROTTLE CC	1			
16	12	29245	WASHER, THROTTLE CONTROL	1			
17	11	20361	NUT, UPPER LINK ROD TO THR	1			
18	10	37559	SCREW, THROTTLE LEVER TO E	1			
19	12	29395	WASHER, THROTTLE CONTROL	1			
20	23	45818	BUSHING, THROTTLE CONTROL	1			
21	11	20509	NUT, THROTTLE CONTROL LEVI	1			
22		37587	SWIVEL, LOWER - THROTTLE C	1			
23	11	20361	NUT, THROTTLE CABLE TO LOW	1			
24		48692	COLLAR, THROTTLE ACTUATOR	1			
25	10	48675	SCREW, ADJUSTING - THROTTL	1			
26	11	20890	NUT, THROTTLE ACTUATOR CO	1			
27		52023	CAP, NYLON - ACTUATOR COLLA	1			
28		48671	PLATE, THROTTLE ACTUATOR	1			
29	10	37892	SCREW, THROTTLE ACTUATOR	2			
30	12	20128	WASHER, THROTTLE ACTUATO	2			
31	13	26396	LOCKWASHER, THROTTLE ACTI	2			
32	23	48674	SPACER, THROTTLE ACTUATOF	2			
33		58454	CAM, THROTTLE ACTUATOR PL	1			
34	12	46246	WASHER, ADAPTOR - DISTRIBU	1			
35		48666A	ADAPTOR ASSEMBLY, DISTRIBL	1			
36	22	25094	FITTING, GREASE - DISTRIBUTO	1			
37	10	22040	SCREW, DISTRIBUTOR HOUSING	3			
38	12	20084	WASHER, DISTRIBUTOR HOUSING	3			
39	11	20083	NUT, DISTRIBUTOR HOUSING S	3			
40		57602	WIRE, GROUND - DISTRIBUTOR	1			
41		55905	BRACKET, STOP	1			