



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	30	20066	BALL BEARING, DISTRIBUTOR H	1		
2	11	54209	NUT, ROTOR SHAFT TO DISTR	1		
3	23	53539	SLEEVE, ROTOR SHAFT	1		
4	393	3736A23	HOUSING ASSEMBLY, DISTRIBU	1		
5		53417	GROUND STRAP ASSEMBLY, DI	1		
6	10	30663	SCREW, GROUND STRAP ATTAC	1		
7		58807A	FLAME ARRESTOR, VENT - DIST	1		
8	15	55853	SHIM, BALL BEARING TO DISTR	1		
9	30	26379	BALL BEARING, DISTRIBUTOR H	1		
10	15	21148A	SHIM, BALL BEARING TO SPACE	AR		
11	23	53538	SPACER, ROTOR SHAFT	1		
12	53	26406	RING, RETAINER - BALL BEARIN	1		
13	393	4313	DISC, ROTOR	1		
14	393	4312	ROTOR, DISTRIBUTOR	1		
15	54	60768	CLAMP, DISTRIBUTOR CAP TO C	1	PART OF DISTRIBUTOR CAP AS	
16	10	62802	SCREW, DISTRIBUTOR CAP CLA	1	PART OF DISTRIBUTOR CAP AS	
17	11	26768	NUT, DISTRIBUTOR CAP CLAMP	1	PART OF DISTRIBUTOR CAP AS	
18	393	3836A	HIGH TENSION CABLE ASSEMBL	1		
19	25	26547	GROMMET, HIGH TENSION CA	1		
20	332	2854	BOOT, HIGH TENSION CABLE	1		
21		60096	BOOT, HIGH TENSION CABLE	1		
22	27	55896	GASKET, DISTRIBUTOR CAP	1		4
23	393	4841A	DISTRIBUTOR CAP ASSEMBLY	1		
--	393	1293A	BRUSH AND SPRING ASSEMBL	1		
24		58807A	FLAME ARRESTOR, VENT - DIS	1		
25	33	59599	SPARK PLUG (CHAMPION L-77V)	6		
26		47899A	SPARK PKLUG LEAD ASSEMBLY	6	ORDER A-36549A1 KIT FOR REF	
--		20121	CONNECTOR, SPARK PLUG LE	6		
27		47604A	PROTECTOR, SPARK PLUG LEA	6		
28		60096	BOOT, SPARK PLUG LEAD TO DI	6		
28A	23	62238	SLEEVE, SPARK PLUG LEAD (7")	6	SERIAL 03295134-09999999	
29	25	26547	GROMMET, SPARK PLUG LEADS	12		
30		45409	WIRE RETAINER, HIGH TENSIO	2		
31		45392	BRACKET, FRONT - WIRE RETAI	1		
32		47398	BRACKET, REAR - WIRE RETAIN	1		
33	10	30663	SCREW, FRONT AND REAR BRA	4		
34		45391	SPACER, RUBBER - HIGH TENSII	2		
35	332	2983A	IGNITION COIL ASSEMBLY, COMI	1		
36	10	24624	SCREW, COIL MOUNTING BRAC	1		
37	13	26392	LOCKWASHER, COIL MOUNTING	1		
38	10	21471	SCREW, COIL MOUNTING BRAC	2		