



Parts List					
Ref	Class	Part	Description	Qty	Footnote
1	1575	4856A 4	DRIVE SHAFT HOUSING ASSEM	1	
1	1573	4590A 3	DRIVE SHAFT HOUSING ASSEM	1	
2	16	56295	STUD, DRIVE SHAFT HOUSING	2	
3	19	32297	PLUG, PLASTIC - TRIM TAB SCI	1	
4	16	34378	STUD, DRIVE SHAFT HSG. TO	7	
5		37417	COVER, TRIM - DRIVE SHAFT HC	1	
6	10	57807	SCREW, TRIM COVER TO BOTTC	4	
	25	57806	GROMMET, PLASTIC - TRIM COV	4	
7	32	62864	TUBE, WATER INLET - SHORT SH	1	
8		62863	TUBE, EXHAUST - SHORT SHAFT	1	
7	32	60897	TUBE, WATER INLET - LONG SHA	1	
8		60435	TUBE, EXHAUST - LONG SHAFT	1	
9	10	28636	SCREW, EXHAUST TUBE ATTAC	2	
10	13	26992	LOCKWASHER, EXHAUST TUBE	2	
11	11	20509	NUT, POWERHEAD STUDS (3/8-	2	
12	12	20086	WASHER, POWERHEAD STUDS	2	
13	27	62289	GASKET, PLATE TO DRIVE SHAF	1	4
14		52887	GUIDE, PUSH ROD - REVERSE L	1	NOT USED WITH FULL POWER
15		47591	ROD, PUSH - REVERSE LOCK (S	1	NOT USED WITH FULL POWER
16	11	47661	NUT, JAM - PUSH ROD	1	NOT USED WITH FULL POWER
17		47559	YOKE, PUSH ROD	1	NOT USED WITH FULL POWER
18	17	39023	PIN, PUSH ROD TO REVERSE LC	1	NOT USED WITH FULL POWER
19	18	25191	COTTER PIN, PUSH ROD PIN	1	NOT USED WITH FULL POWER
20		38820	MOUNT, RUBBER - UPPER (SHD)	2	
20		37398	MOUNT, RUBBER - UPPER (LON)	2	
21	12	31262	WASHER, UPPER MOUNT BOLT	2	
22	12	47840	WASHER, RUBBER - UPPER MOI	2	
23	12	31263	WASHER, UPPER MOUNT BOLT	2	
24	11	34933	NUT, UPPER MOUNT BOLT	2	
25		38821	MOUNT, RUBBER - LOWER (SHC)	2	
25		49456	MOUNT, RUBBER - LOWER (LON)	2	
26	10	49318	SCREW, LOWER MOUNT (5 1/2"	2	
27	12	49339	WASHER, LOWER MOUNT SCRE	2	
28	11	25096	NUT, LOWER MOUNT SCREW	2	
29		25067	BUMPER, RUBBER - LOWER MO	2	
29A		47263A 1	BUMPER ASSEMBLY, RUBBER -	1	
30	11	34933	NUT, GEAR HOUSING AND DRIV	2	
31	12	45176	WASHER, GEAR HOUSING TO D	2	
32	11	29489	NUT, GEAR HOUSING AND DRIV	1	
33	12	45176	WASHER, GEAR HOUSING TO D	1	
34		26508	CLAMP, LOWER MOUNT TO DRI	2	