



Parts List					
Ref	Class	Part	Description	Qty	Footnote
-	1623	4749A 9	GEAR HOUSING ASSEMBLY, COM	1	SEE NOTE BELOW.
-	1623	4749A 4	GEAR HOUSING ASSEMBLY, CO	1	
1	1623	4749A 5	GEAR HOUSING ASSEMBLY	1	
2	17	21438	DOWEL PIN, GEAR HOUSING	2	
3	16	57921	STUD, GEAR HOUSING TO D	1	
4	16	57920	STUD, GEARHOUSING TO DF	2	
5	16	56297	STUD, WATER PUMP BASE AN	1	
6	16	30667	STUD, WATER PUMP BASE A	2	
7	31	32898	BEARING, ROLLER - DRIVE S	1	
8	45	57026	DRIVE SHAFT (SHORT SHAFT)	1	
8	45	62357	DRIVE SHAFT (LONG SHAFT)	1	
9	43	62042	GEAR, PINION - DRIVE SHAFT	1	
10	11	35921	NUT, PINION GEAR TO DRIVE	1	
11	15	30278A 1	SHIM, DRIVE SHAFT BALL BEA	AR	
11	15	30278A 1	SHIM, WATER PUMP BASE TO	AR	
12	30	63326	BEARING, BALL - DRIVE SHAFT	1	
13	53	30726	RING, RETAINING - BALL BEAR	1	
14	27	32438	GASKET, WATER PUMP BASE	1	4
15	25	30224	"O" RING, WATER PUMP BASE	1	4
16	46	48747A 1	WATER PUMP BASE ASSEMBL	1	
17	26	31489	OIL SEAL, WATER PUMP BAS	1	
18	26	31507	OIL SEAL, WATER PUMP BAC	1	
19	17	35973	DOWEL PIN, WATER PUMP E	2	
20	27	32433	GASKET, LOWER - WATER PUI	1	4
21	27	32435	PLATE, FACE - WATER PUMP E	1	
22	27	32434	GASKET, UPPER - FACE PLATE	1	4
23	46	48743A 1	WATER PUMP BODY ASSEMBL	1	4
24		48752	INSERT, WATER PUMP BOD	1	
25	26	31507	OIL SEAL, WATER PUMP BOI	1	
26	26	38970	SEAL, RUBBER - WATER INLI	1	4
27	47	30221	IMPELLER - WATER PUMP	1	
28	28	56654	KEY, IMPELLER DRIVE	1	
29	10	30720	SCREW, WATER PUMP BODY	1	
30	13	26992	LOCKWASHER, WATER PUMP	1	
31	12	29245	WASHER, WATER PUMP BODY	3	
32	11	35045	NUT, WATER PUMP FASTENIN	2	
33	12	36001	WASHER, WATER PUMP BOD	1	
34	11	45592	NUT, WATER PUMP BODY FAS	1	
35	25	30271	RING, RUBBER - CENTRIFUGAI	1	4
36	23	29804	SLEEVE, GUIDE - WATER INLE	1	
37		60909	SEAL, EXHAUST TUBE	1	4