



5722

Parts List

| Ref | Class | Part | Description | Qty | Comment | Footnote |
|-----|-------|-----------|------------------------|-----|---------|----------|
| - | | 884017A 1 | ELECTRIC STARTER KIT | 1 | | |
| 1 | 50 | 803835A 1 | STARTER MOTOR ASSEMBLY | 1 | | |
| 2 | | 803836 | PINION | 1 | | |
| 3 | | 803837 | BRUSH SET (Positive) | 1 | | |
| 4 | | 803837 1 | BRUSH SET (Negative) | 1 | | |
| 5 | | 803838 | BRUSH HOLDER | 1 | | |
| 6 | 10 | 16126 7 | BOLT | 4 | | |
| 7 | 13 | 17025 | LOCKWASHER | 4 | | |
| 8 | 84 | 853815 1 | STARTER CABLE | 1 | | |
| 9 | 85 | 853816 1 | CAP | 2 | | |
| 10 | 87 | 853820A 1 | MAIN SWITCH | 1 | | |
| 11 | | 853821 | PROTECTOR | 1 | | |
| 12 | 54 | 803563 | CLAMP | 4 | | |
| 13 | 262 | 803700 1 | FLYWHEEL (Wiring Gear) | 1 | | |
| 14 | | 803839 | BRACKET | 1 | | |
| 15 | 85 | 853816 | CAP | 1 | | |
| 16 | 84 | 853813A 1 | FUSE WIRE | 1 | | |
| 17 | 88 | 853814 | FUSE | 1 | | |
| 18 | 89 | 853809 | STARTER SOLENOID | 1 | | |
| 19 | 10 | 16223 5 | BOLT | 1 | | |
| 20 | 10 | 16223 | BOLT, (M6 x 14) | 1 | | |
| 21 | 54 | 815044 | CLAMP | AR | | |
| 22 | 87 | 803840 | SWITCH, Neutral | 1 | | |
| 23 | 23 | 803842 | SPACER | 1 | | |
| 24 | 10 | 855544 11 | SCREW | 2 | | |
| 25 | | 803715 1 | BRACKET | 1 | | |
| 26 | | 803841 | ACTUATOR | 1 | | |
| 27 | 84 | 803820 | GROUND WIRE | 1 | | |
| 28 | | 853811 6 | RECTIFIER | 1 | | |
| 29 | 10 | 16123 | SCREW, (25mm) | 1 | | |
| 30 | 13 | 16079 | LOCKWASHER | 1 | | |
| 31 | 84 | 853815 | BATTERY CORD | 1 | | |