



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1			OIL FILTER WRENCH (OBTAIN LI	1		
2	91	83164M	FLYWHEEL PULLER	1		
3	91	83163M	FLYWHEEL HOLDER	1		
4		FT2997	PISTON RING COMPRESSOR	1		
5	91	83190M	POWERHEAD STAND	1		
6	91	809494A	VALVE SPRING COMPRESSOR	1		
7	91	809495A	VALVE GUIDE REMOVER	1		
8	91	809496A	VALVE GUIDE INSTALLER BUSH	1		
9	91	809497A	VALVE GUIDE REAMER	1		
10			VALVE SEAT CUTTER KIT (OBTAIN LI	1		
11	91	36392	CARBURETOR SCALE	1		
12	91	37241	UNIVERSAL PULLER PLATE	1		
13	91	83165M	PULLER ASSEMBLY	1		
14	91	34569A	SLIDE HAMMER	1		
15	91	13664	BEARING CARRIER TOOL	1		
16	91	824788A	DRIVE SHAFT BEARING REMOVAL	1		
17	91	824790A	DRIVE SHAFT BUSHING INSTALL	1		
18	91	13658	MANDREL	1		
19	91	824787	BUSHING REMOVAL TOOL	1		
20	91	824785A	SEAL INSTALLATION TOOL	1		
21	91	29310	PULLER PLATE	1		
22			EXPANDING ROD (SNAP-ON #CE	1		
23			COLLET (JAWS) (SNAP-ON #CG4C	1		
24		FT8950	LEAKAGE TESTER	1		