



4723

Parts List					
Ref	Class	Part	Description	Qty	Footnote
1		850838T	INTAKE VALVE	2	5
2		850839T	EXHAUST VALVE	2	5
3		855959	SEAT, Valve Spring	4	5
4	24	850840	VALVE SPRING	4	5
5		822650	RETAINER	4	5
6	28	822651	KEY	8	5
7	26	822647	SEAL, Valve Stem	4	5,2
8		850841A 1	ROCKER ARM ASSEMBLY	4	5
9	10	825046	SCREW	4	5
10	11	826150	NUT	4	5
11		850842	ROCKER SHAFT	2	5
12		825451	COLLAR	1	5
13		880135	COLLAR	1	5
14		880134	COLLAR	1	5
15	24	825452	SPRING	3	5
16	24	825453	SPRING	1	5
-		802733A98	POWERHEAD	1	[Electric]
-		879783A01	POWERHEAD	1	[Manual]
-	27	835427A00	POWERHEAD GASKET SET	1	