



Parts List					
Ref	Class	Part	Description	Qty	Footnote
1		850838	INTAKE VALVE	2	
2		850839	EXHAUST VALVE	2	
3		855959	SEAT-VALVE SPRING	4	
4	24	850840	VALVE SPRING	4	
5		822650	RETAINER-VALVE SPRING	4	
6	28	822651	KEY	8	
7	26	822647	SEAL-VALVE STEM	4	
8		850841A 1	ROCKER ARM ASSEMBLY	4	
9	10	825046	SCREW	4	
10	11	826150	NUT	4	
11		850842	ROCKER SHAFT	2	
12		825451	COLLAR	3	
13	24	825452	SPRING	3	
14	24	825453	SPRING	1	
-		802733A98	POWERHEAD	1	
-	27	835427A98	POWERHEAD GASKET SET	1	