



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		850838	INTAKE VALVE	2		
2		850839	EXHAUST VALVE	2		
3		855959	SEAT-VALVE SPRING	4		
4	24	850840	VALVE SPRING	4		
5		822650	RETAINER-VALVE SPRING	4		
6	28	822651	KEY	8		
7	26	822647	SEAL-VALVE STEM	4		
8		850841A 1	ROCKER ARM ASSEMBLY	4		
9	10	825046	SCREW	4		
10	11	826150	NUT	4		
11		850842	ROCKER SHAFT	2		
12		825451	COLLAR	3		
13	24	825452	SPRING	3		
14	24	825453	SPRING	1		
-		802733A98	POWERHEAD	1		
-	27	835427A98	POWERHEAD GASKET SET	1		