



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		64165A	1 PLATE ASSEMBLY, EXHAUST EXT	1	UNITED STATES 3751849 AND I	
1		66096A	1 PLATE ASSEMBLY, EXHASUT EX	1	UNITED STATES 3751850 AND I	
2	23	27132	1 BUSHING, NYLON - EXHAUST E	1	UNITED STATES 3751850 AND I	
3		37918	1 SEAL, EXHAUST EXTENSION F	1		
4		38032	1 STRIP, RETAINING - EXHAUST	1		
5	10	37571	5 SCREW, SEAL AND RETAINING	5		
6	17	23784	2 DOWEL PIN, EXHAUST EXTEN	2		
7	27	64173	1 GASKET, POWERHEAD TO EXTE	1	UNITED STATES 3751849 AND I	4
7	27	66101	1 GASKET, POWERHEAD TO EXTE	1	UNITED STATES 3751850 THRL	2
7	27	69238	1 GASKET, POWERHEAD TO EXTE	1	UNITED STATES 4121435 AND I	3
8	10	62644	1 SCREW, ADAPTOR PALTE ATTA	1	UNITED STATES 3751849 AND I	
9	13	26993	1 LOCKWASHER, ADAPTOR PLATE	1	UNITED STATES 3751849 AND I	
8	10	66023	2 SCREW, ADAPTOR PLATE TO HI	2	UNITED STATES 3751850 AND I	
10	10	66023	7 SCREW, HOUSING PLATE TO DF	7	UNITED STATES 3751850 AND I	
11	27	60945	1 GASKET, PLATE TODRIVE SHAF	1	UNITED STATES 3751849 AND I	4
11	27	66102	1 GASKET, PLATE TO DRIVE SHAF	1	UNITED STATES 3751850 AND I	2,3
12	12	34437	7 WASHER, DRIVES SHAFT HOUS	7	UNITED STATES 3751849 AND I	
13	11	64809	7 NUT, DRIVE SHAFT HOUSING S	7	UNITED STATES 3751849 AND I	
14	26	60898	1 SEAL, DRIVE SHAFT HOUSING P	1		
15		64164A	2 PLATE ASSEMBLY, DRIVE SHAF	1	UNITED STATES 3751849 AND I	
15		66098A	2 PLATE ASSEMBLY, DRIVE SHAF	1	UNITED STATES 3751850 THRL	
15		74257A	3 PLATE ASSEMBLY, DRIVE SHAF	1	UNITED STATES 4403387 AND I	
16	26	38970	1 SEAL, RUBBER - WATER INTAK	1		2,3,4
17	17	23784	2 DOWEL PIN, DRIVE SHAFT HO	2		2,3,4
18	27	62362	1 GASKET, MEGAPHONE TO DRIVI	1		
19		60437	1 MEGAPHONE, EXHAUST	1		
20	10	60480	3 SCREW, MEGAPHONE TO DRIVE	3		
21	12	29245	3 WASHER, MEGAPHONE SCREW	3		
22	12	25970	6 WASHER, POWERHEAD STUD	6		
23	11	34932	6 NUT, POWERHEAD STUD	6		