



Parts List					
Ref	Class	Part	Description	Qty	Footnote
1		64461A 4	HYDRAULIC PUMP ASSEMBLY	1	
2	25	21720	"O" RING, HYDRAULIC PUMP T	4	
3	10	28634	SCREW, FILLER - HYDRAULIC I	1	
4	12	20260	WASHER, SEALING - HYDRAULI	1	
5	10	38257	SCREW, VENT - HYDRAULIC PI	1	
6	37	55901	DECAL, INSTRUCTION - HYDRAL	1	
7		32979	BATTERY LEAD (POSITIVE)	1	
8		32988	BATTERY LEAD (NEGATIVE)	1	
9		45336	PLATE, MANIFOLD	1	
10		45197A 2	CONTROL VALVE ASSEMBLY	1	
--	25	21720	"O" RING, HYDRAULIC PUMP T	4	
11	25	45254	"O" RING, CONTROL VALVE TC	1	
12	25	21720	"O" RING, CONTROL VALVE TC	1	
13	25	45253	"O" RING, CONTROL VALVE TC	2	
14	10	56500	SCREW, CONTROL VALVE AND V	4	(1 1/4")
15	13	26992	LOCKWASHER, CONTROL VALVE	4	
16	22	38609	PLUG, CONTROL VALVE (3/8-24"	2	
17	22	46008	PLUG, CONTROL VALVE (1/2-20"	2	
18		45325	CONNECTOR AND HARNESS	1	
19		45559	TERMINAL BLOCK, HYDRAULIC F	1	
20	10	35519	SCREW, TERMINAL BLOCK TO H	2	
21	10	30663	SCREW, HARNESS LEADS TO TE	2	
22		45377	BRACKET, MOUNTING - HYDRAL	2	
23	10	24234	SCREW, MOUNTING BRACKET T	4	
24	13	39107	LOCKWASHER, MOUNTING BRA	4	
25	11	21908	NUT, MOUNTING BRACKET SCR	4	
26	10	28009	BOLT, HYDRAULIC PUMP TO BO.	2	
27	11	35304	NUT, HYDRAULIC PUMP BOLT	2	
28		25661	STARTER SOLENOID	1	
29	13	26996	LOCKWASHER, STARTER SOLEI	2	
30	11	20645	NUT, STARTER SOLENOID TERM	2	
31	13	26993	LOCKWASHER, STARTER SOLEI	2	
32	11	20083	NUT, STARTER SOLENOID TERM	2	
33		46265	BOOT, RUBBER - STARTER SOLI	2	
34		45321	BRACKET, MOUNTING - STARTE	1	
35	10	21140	SCREW, MOUNTING BRACKET T	2	
36	13	26992	LOCKWASHER, MOUNTING BRA	2	
37	10	34290	SCREW, STARTER SOLENOID TI	2	
38	13	26992	LOCKWASHER, STARTER SOLEI	2	
39	11	21825	NUT, STARTER SOLENOID SCRE	2	
40	12	27660	LOCKWASHER, HYDRAULIC PUM	1	