



					Parts List		
Ref	Class	Part	Description	Qty	Comment	Footnote	
1	1575	5240A 4	DRIVE SHAFT HOUSING ASSEM	1			
2	16	56295	STUD, DRIVE SHAFT HOUSING	2			
3	19	64649	PLUG, PLASTIC - TRIM TAB SC	1			
5		37417	COVER, TRIM - DRIVE SHAFT HC	1			
6	10	57807	SCREW, TRIM COVER TO BOTTC	4			
6A	25	57806	GROMMET, PLASTIC - TRIM COV	4			
6B		46933A 2	GROUND STRAP ASSEMBLY, TR	2			
6C	10	62568	SCREW, GROUND STRAP ATTAI	2			
7	32	62864	TUBE, WATER INLET	1			
8		65370	TUBE, EXHAUST	1			
8A		65638	BOOT, TUBE MOUNT	2			
11	11	69254	NUT, POWERHEAD STUDS (3/8-	2			
12	12	25970	WASHER, POWERHEAD STUDS	2			
14		52887	GUIDE, PUSH ROD - REVERSE L	1			
15		47591	ROD, PUSH - REVERSE LOCK	N 1			
16	11	47661	NUT, JAM - PUSH ROD	NOT US 1			
17		47559	YOKE, PUSH ROD	NOT USED W 1			
19	18	25191	COTTER PIN, PUSH ROD PIN	N 1			
20		75297	MOUNT, RUBBER - UPPER	2			
21	12	47840	WASHER, RUBBER - UPPER MOI	2			
22	12	31263	WASHER, UPPER MOUNT BOLT	2			
23	11	34933	NUT, UPPER MOUNT BOLT	2			
24		75300	MOUNT, RUBBER - LOWER	2			
25	10	49318	SCREW, LOWER MOUNT (5 1/2"	2			
26	12	49339	WASHER, LOWER MOUNT SCRE	2			
27	11	25096	NUT, LOWER MOUNT SCREW	2			
28		25067	BUMPER, RUBBER - LOWER MO	2			
30	11	34933	NUT, GEAR HOUSING AND DRIV	2			
31	12	45176	WASHER, GEAR HOUSING TO D	2			
32	11	29489	NUT, GEAR HOUSING AND DRIV	1			
33	12	45176	WASHER, GEAR HOUSING TO D	1			
34		35608	CLAMP, LOWER MOUNT TO DRIP	2			
35	24	35522	SPRING, TENSION - LOWER MOI	4			
36	10	29256	SCREW, LOWER MOUNT CLAMP	4			
37		35474	COVER, LOWER MOUNT CLAMP	2			
38	11	35521	NUT, LOWER MOUNT CLAMP CC	2			
39	10	29722	SCREW, COVER TO LOWER CLA	2			
40		62497	BRACKET, SUPPORT - DRIVE SH	1			
41	10	48409	SCREW, SUPPORT BRACKET AT	2			