



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
-	1623	6048A 4	GEAR HOUSING ASSY, COMP. S	1		
1	1623	6048A 3	GEAR HOUSING ASSY - SERIA	1		
1	1655	7333A23	GEAR HOUSING ASSY SERIAL	1		
1A	22	85822A 1	CONNECTOR ASSEMBLY, SP	1		
2	17	46912	DOWEL PIN, GEAR HOUSING	2		
3	16	57921	STUD, GEAR HOUSING TO D	1		
4	16	57920	STUD, GEAR HOUSING TO D	2		
5	16	56297	STUD, WATER PUMP BASE A	1		
6	16	30667	STUD, WATER PUMP BASE A	2		
7	31	32898	BEARING, ROLLER - DRIVE S	1		
8	45	69250	DRIVE SHAFT	1		
9	43	68548	GEAR, PINION - DRIVE SHAFT	1		
10	11	35921	NUT, PINION GEAR TO DRIVE	1		
11	23	70412	SPACER, BALL BEARING TO B	1		
11	15	57007A 1	SHIM, BALL BEARING TO BASE	AR		
12	31	69220	ROLLER BEARING, DRIVE SHA	1		
14	27	33146	GASKET, WATER PUMP BASE	1		
15	25	33145	"O" RING, WATER PUMP BASE	1		
16	46	69222A 1	WATER PUMP BASE ASSEMBL	1		
--	19	48750	PLUG, FLUSHING	1		
--	12	49221	WASHER, FLUSHING PLUG	1		
17	26	31489	OIL SEAL, WATER PUMP BAS	1		
18	26	31507	OIL SEAL, WATER PUMP BAS	1		
19	17	35973	DOWEL PIN, WATER PUMP E	2		
20	27	32433	GASKET, LOWER - WATER PUI	1		
21		32435	PLATE, FACE - WATER PUMP E	1		
22	27	32434	GASKET, UPPER - FACE PLATE	1		
23	46	64141A 1	WATER PUMP BODY ASSEMBL	1		
24		48752	INSERT, WATER PUMP BODY	1		
26	26	38970	SEAL, RUBBER - WATER INLI	1		
27	47	65960	IMPELLER, WATER PUMP	1		
28	28	56654	KEY, IMPELLER DRIVE	1		
29	10	30720	SCREW, WATER PUMP BODY	1		
30	13	26992	LOCKWASHER, WATER PUMP	1		
31	12	29245	WASHER, WATER PUMP BODY	3		
32	11	35888	NUT, WATER PUMP FASTENIN	2		
33	12	36001	WASHER, WATER PUMP BODY	1		
34	11	35814	NUT, WATER PUMP BODY FAS	1		
35	25	30271	RING, RUBBER - CENTRIFUGAI	1		
36	23	29804	SLEEVE, GUIDE - WATER INLE	1		
37		27641	SEAL, EXHAUST FLOW	1		