



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
	1653	6048A 4	GEAR HOUSING ASSY, COMP. S	1		
1	1623	6048A 3	GEAR HOUSING ASSY - SERIA	1		
1	1655	7333A23	GEAR HOUSING ASSY - SERIA	1		
49		54346	CAM, SHIFT - SERIAL GROUP #	1		
49		76039	CAM, SHIFT - SERIAL GROUP #	1		
50		30625	FOLLOWER, CAM	1		
51		30624	SLIDE, CROSS PIN	1		
52	24	30622	SPRING, COMPRESSION - CAM	1		
53	15	30923A 1	SHIM, BEARING OUTER RACE	AR		
54	31	30894A 1	TAPERED ROLLER BEARING A	1		
55	31	30895	BEARING, ROLLER - FORWARD	1		
56	43	68447	FORWARD GEAR	1		
57	52	34239	RATCHET, SLIDING GEAR	1		
58	17	30632	PIN, CROSS - RATCHET TO PR	1		
59	24	30893	SPRING, RETAINING - CROSS F	1		
60	44	52542	SHAFT, PROPELLER	1		
61	43	68347	REVERSE GEAR	1		
62	12	71143A 1	WASHER, THRUST - BEARING	1		
63	25	29976	"O" RING, BEARING CARRIER	1		4
64		73800A 1	BEARING CARRIER ASSEMBLY	1		
--	25	32546	"O" RING, BEARING CARRIER	1		
--	30	31265	BALL BEARING, REVERSE GEA	1		
65	31	30956	BEARING, ROLLER - BEARIN	1		
66	26	76868	OIL SEAL, BEARING CARRIEF	2		
67	28	30281	KEY, LOCATING - BEARING CA	1		
68	14	52700	TAB WASHER, GEAR HOUSING	1		
69		52699	COVER, GEAR HOUSING	1		
70		31640A 1	TRIM TAB, GEAR HOUSING	1		
71	10	66024	SCREW, TRIM TAB TO GEAR H	1		
72	12	45176	WASHER, GEAR HOUSING TO D	2		
73	11	34933	NUT, GEAR HOUSING TO DRIVE	2		
74	10	65210	SCREW, GEAR HOUSING TO DR	1		
75		75282	THRUST HUB AND WASHER AS:	1		
76	14	31210	TAB WASHER, PROPELLER NUT	1		
77	11	52707	NUT, PROPELLER	1		