



8823

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		880596T05	FUEL SUPPLY MODULE	1		
1	84	880596521	HARNESS	1		
2	53	880596515	CLIP	1		
3	25	855362001	GROMMET	3		
4	23	855364	BUSHING	3		
5		880596T50	COVER KIT	1		
6	10	880596513	SCREW	8		
7		880596503	REGULATOR, With O-Rings	1		
8	54	880596512	CLAMP	2		
9	32	880596511	HOSE	1		
10		880596522	FLOAT	1		
11		880596T55	FUEL PUMP, High Pressure	1		
12		880596506	SEAL	1		
13	26	880596507	SEAL	1		
14	26	880596510	SEAL	1		
15		880596T58	FUEL PUMP KIT, Lift	1		
16		880596509	ISOLATOR	1		
17	26	880596502	SEAL	1		
18		880596T51	HOUSING ASSEMBLY	1		
19	19	880596516	PLUG	1		
20	25	880596517	O-RING	1		
-	26	880596A01	REPAIR KIT, Seal	1		
-		889283A01	TOOL KIT, Fuel Priming	1		