



Parts List

Ref	Class	Part	Description	Qty	Comment	Footnote
1	2177	8869A 8	TOP COWL ASSEMBLY (WITHOUT	1		
2		43515	HINGE, COWL LATCH	1		
3		43555	BRACKET, TOP COWL	1		
4	10	40001 8	SCREW, HINGE TO TOP COWL	4		
5	2176	9107A 2	BOTTOM COWL ASSEMBLY, POR	1		
6		44149 67	SEAL, BOTTOM COWL	2		
7		43514	LATCH, BOTTOM COWL	1		
8	10	40001 8	SCREW, LATCH TO BOTTOM CO	2		
9	2176	9108A 1	BOTTOM COWL ASSEMBLY, STAI	1		
10	25	41604	GROMMET, BOTTOM COWL	1		
11		85982	PLATE, BOTTOM COWL	2		
12	10	70332	SCREW, PLATE TO BOTTOM COV	8		
13		87308	BRACKET, COWL LATCH	1		
14	10	40001 8	SCREW, BRACKET TO BOTTOM C	2		
15	17	25870	ROLL PIN, LINK	2		
16		89583	LINK, COWL LATCH	1		
17		89582	LATCH, COWL-REAR	1		