



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		62351A	RECTIFIER ASSEMBLY	1		
2	10	48409	SCREW,RECTIFIER TO CYLINDE	2		
3	11	45076	NUT,RECTIFIER TERMINALS	3		
4	89	96054	STARTER SOLENOID	1		
5	10	40001 68	SCREW,STARTER SOLENOID TC	2		
6	11	26419	NUT,STARTER SOLENOID TERM	2		
7	11	64015	NUT,STARTER SOLENOID TERM	2		
8	84	88809A	WIRE ASSEMBLY,YELLOW	1		
9	84	88439A	BATTERY WIRE ASSEMBLY,RED	1		
9	84	88439A	BATTERY WIRE ASSEMBLY,BLAI	1		
10	84	92436A	WIRING HARNESS ASSEMBLY,E	1		
11	88	95085	FUSE	1		
12		92439	BRACKET,WIRING HARNESS	1		
13	10	40003 27	SCREW,BRACKET	1		
14	11	40021 2	NUT,BRACKET SCREW	1		
15	54	32523	CLAMP,WIRING HARNESS	1		
16	54	55098	CLAMP,WIRING HARNESS	1		
17		86704A	STATOR ASSEMBLY,AUXILIARY	1		
18	10	40001 23	SCREW,STATOR ATTACHING(30	3		
19	50	90983A	STARTER MOTOR ASSEMBLY	1		
20		96561	DRIVER KIT	1		
21		96562	DRIVE	1		
22		96563	DRIVE	1		
23		96563	ARMATURE	1		
24		96564	END CAP,COMMUTATOR W/SF	1		
25	10	96566	THRU BOLT	1		
26	10	40001149	SCREW,STARTER MOTOR ATTA	2		