



Parts List					
Ref	Class	Part	Description	Qty	Footnote
-	1665	8669A 3	GEAR HOUSING ASSEMBLY,COM	1	
-	1665	8669A 4	GEAR HOUSING ASSEMBLY,COM	1	
1	1665	8669A 2	GEAR HOUSING ASSEMBLY	1	
39		44138	TRIM TAB	1	
40	10	40003 55	SCREW,TRIM TAB(35MM)	1	
41	12	70132	WASHER,TRIM TAB SCREW	1	
42	31	99328A 1	ROLLER BEARING ASSEMBLY	1	
43	43	44213A 1	FORWARD GEAR	1	
44	23	85557	BUSHING,FORWARD GEAR	1	
45		85094	CAM FOLLOWER	1	
46	24	38114	SPRING,RETAINING-CROSS PII	1	
47	52	41040	CLUTCH,SLIDING	1	
48	17	85093	CROSS PIN,CLUTCH TO PROPE	1	
49	24	88680	SPRING,COMPRESSION-PROPI	1	
50	44	99740	PROPELLER SHAFT	1	
51	43	99542	REVERSE GEAR	1	
52		99906A 1	BEARING CARRIER ASSEMBLY	1	
53	31	21739	ROLLER BEARING	1	
54	26	41132	OIL SEAL,BEARING CARRIER	1	
55	26	41131	OIL SEAL,BEARING CARRIER	1	
56	25	85549	"O" RING,BEARING CARRIER	1	2
57		87293	PLATE,GEAR HOUSING	1	
58	10	91909	SCREW,COVER TO GEAR HOU	3	
59		85128A 1	THRUST HUB ASSEMBLY,PROPE	1	
60	48	86848A 4	PROPELLER ASSEMBLY	1	
61	11	88228	PROPELLER NUT	1	
62	10	43215	SCREW,GEAR HOUSING(25MM)	4	
63	12	43328	WASHER,GEAR HOUSING SCRE	4	
64	23	41589	SPACER,GEAR HOUSING SCRE	4	