



IGNITION COMPONENTS

				Parts List		
Ref	Class	Part	Description	Qty	Comment	Footnote
1	84	88891A	1 HARNESS ASSEMBLY, PRIMARY	1		
2		86617A	5 STATOR ASSEMBLY	1		
3	10	40001	20 SCREW, STATOR ATTACHING (2	2		
4	54	23568	5 SCREW, STATOR ATTACHING (1	2		
5	54	23568	CLIP, STATOR LEADS	1		
6	12	40057108	SCREW, CLIP TO SWITCH BOX (2	1		
7	12	27736	WASHER, CLIP SCREW	1		
8	54	98450A	1 TRIGGER ASSEMBLY	1		
9	54	24836	CLIP, TRIGGER LEADS	1		
10	10	77137	SCREW, CLIP TO CRANKCASE	1		
11	10	69205	"C" WASHER, CLIP SCREW	1		
12	339	7370A	6 IGNITION COIL ASSEMBLY	2		
13	10	40001	89 SCREW, COIL TO CYLINDER BLC	2		
14	23	88173	TAB, COIL SCREW	2		
15	23	88171	BUSHING, COIL SCREW	2		
16	11	45076	NUT, COIL TERMINAL	4		
17	84	93475A	25 LEAD ASSEMBLY, HIGH TENSION	2		
18	85	70674	BOOT, COIL	2		
19	85	63709A	1 BOOT ASSEMBLY, SPARK PLUG	2		
20	33	97186	SPARK PLUG, (NGK-B9HS-10)	2		
21	33	86866	SPARK PLUG	2	CHAMPION #QL-77J4 - CANADA	
22	339	7452A	3 SWITCH BOX ASSEMBLY	1		
23	10	40057108	SCREW, SWITCH BOX TO CYLIN	3		
24	11	45076	NUT, SWITCH BOX TERMINALS	6		