



IGNITION COMPONENTS

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	84	88891A	HARNESS ASSEMBLY, PRIMARY	1		
2		86617A	5 STATOR ASSEMBLY	1		
3	10	40001	20 SCREW, STATOR ATTACHING (2)	2		
4	10	40001	5 SCREW, STATOR ATTACHING (1)	2		
5	54	23568	CLIP, STATOR LEADS	1		
6	10	40057108	SCREW, CLIP TO SWITCH BOX (2)	1		
7	12	27736	WASHER, CLIP SCREW	1		
7		93880A	1 TRIGGER ASSEMBLY	1	UNITED STATES 6043400 AND I	
7		98450A	1 TRIGGER ASSEMBLY	1	UNITED STATES 6043401 AND I	
8	54	24836	CLIP, TRIGGER LEADS	1		
9	10	77137	SCREW, CLIP TO CRANKCASE	1		
10		69205	"C" WASHER, CLIP SCREW	1		
11	339	7370A	6 IGNITION COIL ASSEMBLY	2		
12	10	40001	89 SCREW, COIL TO CYLINDER BLOC	2		
13		88173	TAB, COIL SCREW	2		
14	23	88171	BUSHING, COIL SCREW	2		
15	11	45076	NUT, COIL TERMINAL	4		
16	84	90816A	25 LEAD ASSEMBLY, HIGH TENSION	2		
17	85	70674	BOOT, COIL	2		
18	85	63709A	1 BOOT ASSEMBLY, SPARK PLUG	2		
19	33	86864	SPARK PLUG, CHAMPION #L-77J	2		
19	33	86866	SPARK PLUG	2	CHAMPION #QL-77J4 - CANADA	
20	339	7452A	3 SWITCH BOX ASSEMBLY	1		
21	13	69432	LOCKWASHER, GROUND	1		
22	10	40057108	SCREW, SWITCH BOX TO CYLINDER	3		
23	11	45076	NUT, SWITCH BOX TERMINALS	6		