



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		62351A	RECTIFIER ASSEMBLY	1		
2	10	48409	SCREW, RECTIFIER TO CYLINDE	2		
3	11	45076	NUT, RECTIFIER TERMINALS	3		
4	89	91975	STARTER SOLENOID	1		
5	10	40001 68	SCREW, STARTER SOLENOID TI	2		
6	11	26419	NUT, STARTER SOLENOID TERM	2		
7	11	64015	NUT, STARTER SOLENOID TERM	2		
8	84	88809A 5	WIRE ASSEMBLY, YELLOW	1		
9	84	88439A 8	BATTERY WIRE ASSEMBLY, REC	1		
9	84	88439A 6	BATTERY WIRE ASSEMBLY, BLA	1		
10	84	92436A 3	WIRING HARNESS ASSEMBLY, E	1		
11	88	95085	FUSE	1		
12		92439	BRACKET, WIRING HARNESS	1		
13	10	40003 27	SCREW, BRACKET	1		
14	11	40021 2	NUT, BRACKET SCREW	1		
15	54	32779	CLAMP, WIRING HARNESS	1		
16	54	55098	CLAMP, WIRING HARNESS	1		
17		86704A 2	STATOR ASSEMBLY, AUXILLARY	1		
18	10	40001 23	SCREW, STATOR ATTACHING (3	3		
19		94301A 1	PLATE ASSEMBLY, CHOKE KNOE	1		
20	10	95088	SCREW, PLATE TO SOLENOID	2		
21		95020	LEVER, CHOKE	1		
22	53	95019	RETAINING RING, CHOKE LEVEF	1		
23	89	94973A 3	SOLENOID ASSEMBLY	1		
24	18	21071	COTTER PIN, CHOKE LEVER TO	1		
25	50	90983A 1	STARTER MOTOR ASSEMBLY	1		
26		96561	DRIVE KIT	1		
27		96562	DRIVE	1		
28		96563	END CAP	1		
29		96565	ARMATURE	1		
30		96564	END CAP, COMMUTATOR W/S	1		
31	10	96566	THRU BOLT	1		
32	10	40001149	SCREW, STARTER MOTOR ATT	2		