



## Parts List

Ref	Class	Part	Description	Qty	Comment	Footnote
1		42712A 1	HOUSING,STARTER	1		
2		86971	COVER,STARTER HOUSING	1		
3		94019	LEVER,LOCK (UPPER)	1		
4	24	89542	SPRING,UPPER LOCK LEVER	1		
5		93876	LEVER,LOCK (LOWER)	1		
6	10	61802	SCREW,LOWER LOCK LEVER	1		
7	17	38489	ROLL PIN, LOCK LEVER	1		
8	10	40001 74	SCREW,STARTER HOUSING AT	2		
8	10	40001 83	SCREW,STARTER HOUSING AT	1		
9		90478	PAD,FELT	1		
10	24	86857	SPRING,STARTER	1		
11	50	42566	SHEAVE,STARTER	1		
12	24	86851	SPRING,CAM	2		
13		86850	CAM	2		
14	53	86849	RETAINING RING,CAM	2		
15	50	86855	ROPE,STARTER	1		
16		85174A 1	HANDLE ASSEMBLY,STARTER RO	1		
17	24	86852	SPRING,CAM	1		
18		86853	CAM	1		
19	10	97516	SCREW,CAM TO STARTER SHEA	1		
20		42626	SUPPORT,STARTER HANDLE	1		
21	10	40057111	SCREW,SUPPORT TO STARTER	2		
22	12	40022 13	WASHER,SUPPORT SCREW	4		
23	23	30977	SPACER,SUPPORT SCREW	4		
24	11	40063 3	NUT,SUPPORT SCREW	2		