



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	258	8274A 6	FLYWHEEL ASSEMBLY	1		
2	10	97359A 1	SCREW,FLYWHEEL TO CRANKS	1		
3	12	86496	WASHER,FLYWHEEL SCREW	1		
4	43	99301	RING GEAR,FLYWHEEL-ELECTR	1		
5	10	40039106	SCREW, RING GEAR TO FLYWHI	4		
6	464	8586A 2	CRANKSHAFT ASSEMBLY -ELEC	1		
7		85981	SEAL CRANKSHAFT	1		
8	26	85107	OIL SEAL,CRANKSHAFT-LOWER	1		
9	31	85113	ROLLER BEARING,CRANKSHAFT	1		
10	31	85114	ROLLER BEARING,CRANKSHAFT	1		
11	26	85974	OIL SEAL,CRANKSHAFT-UPPER	1		
12		86992A 2	BEARING ASSEMBLY,CENTER M	1		
13	28	20094	KEY,FLYWHEEL DRIVE	1		
14	767	8511A 3	PISTON AND PIN ASSEMBLY	2		
15	40	47276	LOCK RING,PISTON PIN	4		
16	39	96525A12	PISTON RING ASSUMBLY	1		
17	630	8835A 2	CONNECTING ROD ASSEMBLY	2		
18	29	98295	NEEDLE BEARING,PISTON ENI	54		
19		42025	BEARING,LOCATING-NEEDLE E	4		
20	31	41620A 1	ROLLER BEARING ASSEMBLY	2		
21	10	40082 25	SCREW,CONNECTING ROD(25)	4		