



Parts List					
Ref	Class	Part	Description	Qty	Footnote
1	258	8274A 6	FLYWHEEL ASSEMBLY	1	
2		97359A 1	SCREW, FLYWHEEL TO CRANKE	1	
3		86496	WASHER, FLYWHEEL SCREW	1	
4	43	99301	RING GEAR, FLYWHEEL - ELECT	1	
5	10	40039106	SCREW, RING GEAR TO FLYWHI	4	
6	464	8697A 2	CRANKSHAFT ASSEMBLY	1	
7		99538	SEAL, CRANKSHAFT	1	15
8	26	85107	OIL SEAL, CRANKSHAFT (LOWEF	1	
9	31	85113	ROLLER BEARING, CRANKSHAF	1	
10	31	85114	ROLLER BEARING, CRANKSHAF	1	
11	26	85974	OIL SEAL, CRANKSHAFT (UPPER	1	
12		86992A 2	BEARING ASSEMBLY, CENTER N	1	
13	28	20094	KEY, FLYWHEEL DRIVE	1	
14	767	8511A 3	PISTON AND PIN ASSEMBLY	2	
15	40	47276	LOCK RING, PISTON PIN	4	
16	39	96525A12	PISTON RING ASSEMBLY	1	
17	630	8835A 2	CONNECTING ROD ASSEMBLY	2	
18	29	98295	NEEDLE BEARING, PISTON EN	54	
19		42025	BEARING, LOCATING - NEEDLE	4	
20	31	41620A 1	ROLLER BEARING ASSEMBLY	2	
21	10	40082 25	SCREW, CONNECTING ROD (2	4	
--	27	41499A84	GASKET SET	--	CONTENTS INDICATED BY FOO
--		90885A84	POWERHEAD ASSEMBLY, COMF	--	INCLUDES CYLINDER BLOCK AI