



Parts List					
Ref	Class	Part	Description	Qty	Footnote
1	2177	8869A 8	TOP COWL ASSEMBLY	1	1
2		43515	HINGE, COWL LATCH	1	
3		43555	BRACKET, TOP COWL	1	
4	10	40001 8	SCREW, HINGE TO TOP COWL	4	
5	2176	9107A 2	BOTTOM COWL ASSEMBLY COW	1	1
6	2176	9108A 1	BOTTOM COWL ASSEMBLY, STA	1	1
7		85982	PLATE, BOTTOM COWL	2	
8	10	70332	SCREW, PLATE TO BOTTOM C	8	
9		15067A 1	SEAL, BOTTOM COWL	2	
10		43514	LATCH, BOTTOM COWL	1	
11	10	40001 8	SCREW, LATCH TO BOTTOM CO	2	
12		43554A 5	LATCH, COWL-REAR	1	
13	10	40001 8	SCREW, BRACKET TO BOTTOM	2	
14		11281	COVER, FUEL INLET	1	
15	25	41604	PLATE, BOTTOM COWL (WITHO	1	
16	87	11083A 6	STOP SWITCH ASSEMBLY - WITI	1	
17		12044	RETANER, STOP SWITCH - WI	1	
18		15920A54	LANYARD ASSEMBLY - WITH S	1	