



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	258	8274A 6	FLYWHEEL ASSEMBLY	1		
2	10	97359A 1	SCREWM FLYWHEEL TO CRANK	1		
3	21	86496	WASHER, FLYWHEEL SCREW	1		
4	43	99301	RING GEAR, FLYWHEEL - ELECT	1		
5	10	40039106	SCREW, RING GEAR TO FLYWHI	4		
6	464	8978A 2	CRANKSHAFT ASSEMBLY	1		
7	26	43507	SEAL, CRANKSHAFT	1		2
8	26	85107	OIL SEAL, CRANKSHAFT-LOWEF	1		
9	31	85113	ROLLER BEARING, CRANKSHAF	1		
10	31	85114	ROLLER BEARING, CRANKSHAF	1		
11	26	85974	OIL SEAL, CRANKSHAFT - UPPEF	1		
12		86992A 2	BEARING ASSEMBLY, CENTER N	1		
13	28	20094	KEY, FLYWHEEL DRIVE	1		
14	767	9104A 3	PISTON AND PIN ASSEMBLY	2	UNITED STATES B-114230 AND	
14	767	9104A 9	PISTON AND PIN ASSEMBLY	2	UNITED STATES B-114231 AND	
15	40	47276	LOCK RING, PISTON PIN	4		
16	39	12810A12	PISTON RING ASSEMBLY	1		
17	630	8835A 2	CONNECTING ROD ASSEMBLY	2		
18	29	98295	NEEDLE BEARING, PISTON EN	54		
19		42025	BEARING, LOCATING - NEEDLE	4		
20	31	41620A 1	ROLLER BEARING ASSEMBLY	2		
21	10	40082 25	SCREW, CONNECTING ROD (2)	4		
-	27	41499A87	GASKET SET			