



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	2190	9163A 8	TOP COWL ASSEMBLY	1		1
2		43515	HINGE, COWL LATCH	1		
3		43555	BRACKET, TOP COWL	1		
4	10	40001 8	SCREW, HINGE TO TOP COWL	6		
5		44311 1	SHIELD, TOP COWL	1		
6		33786	WASHER, SHIELD SCREW	2		
7	12	9107A 3	BOTTOM COWL, PORT (DARK GF)	1		
7	2176	9107A 4	BOTTOM COWL, PORT (LIGHT GF)	1		1
8	2176	9108A 3	BOTTOM COWL, STARBOARD	1		1
9		85982	PLATE, BOTTOM COWL	2		
10	10	70332	SCREW, PLATE TO BOTTOM C	8		
11		15067A 1	SEAL, BOTTOM COWL	2		
12		43514	LATCH, BOTTOM COWL	1		
13	10	40001 8	SCREW, LATCH TO BOTTOM CO	2		
14		43554A 4	LATCH, COWL-REAR	1		
15	10	40001 8	SCREW, BRACKET TO BOTTOM	2		
16		11281	COVER, FUEL INLET	1		
17	25	41605 2	PLATE, BOTTOM COWL WITHOL	1		
17	25	41605 1	PLATE, BOTTOM COWL	1	WITH STOP SWITCH (LIGHT GF	
18	87	11083A 6	STOP SWITCH ASSEMBLY - WITI	1		
19		12044	RETAINER, STOP SWITCH - WI	1		
20		15320A54	LANYARD ASSEMBLY - WITH ST	1		