



| Parts List | | | | | | |
|------------|-------|----------|-----------------------------|-----|---------------------------|----------|
| Ref | Class | Part | Description | Qty | Comment | Footnote |
| 1 | | 62351A 2 | RECTIFIER ASSEMBLY | 1 | | |
| 2 | 10 | 48409 | SCREW, RECTIFIER TO CYLINDE | 2 | | |
| 3 | 11 | 45076 | NUT, RECTIFIER TERMINALS | 3 | | |
| 4 | 89 | 96054 | STARTER SOLENOID | 1 | | |
| 5 | 10 | 40001 68 | SCREW | 2 | STARTER SOLENOID TO CRANI | |
| 6 | 11 | 26419 | NUT, STARTER SOLENOID TERM | 2 | | |
| 7 | 11 | 64015 | NUT, STARTER SOLENOID TERM | 2 | | |
| 8 | 84 | 88809A 5 | WIRE ASSEMBLY, YELLOW | 1 | | |
| 9 | 84 | 88439A 8 | BATTERY WIRE ASSEMBLY, REC | 1 | | |
| 9 | 84 | 88439A 6 | BATTERY WIRE ASSEMBLY, BLA | 1 | | |
| 10 | 84 | 92436A 5 | WIRING HARNESS ASSEMBLY, E | 1 | | |
| 11 | 88 | 95085 | FUSE | 1 | | |
| 12 | | 92439 | BRACKET, WIRING HARNESS | 1 | | |
| 13 | 10 | 40003 27 | SCREW, BRACKET | 1 | | |
| 14 | 11 | 40063 4 | NUT, BRACKET SCREW | 1 | | |
| 15 | 54 | 32523 | CLAMP, WIRING HARNESS | 1 | | |
| 16 | 54 | 55098 | CLAMP, WIRING HARNESS | 1 | | |
| 17 | | 86704A 2 | STATOR ASSEMBLY, AUXILIARY | 1 | | |
| 18 | 10 | 40001 23 | SCREW, STATOR ATTACHING (3 | 3 | | |
| 19 | 50 | 90983A 1 | STARTER MOTOR ASSEMBLY | 1 | | |
| 20 | | 96561 | DRIVE KIT | 1 | | |
| 21 | | 96562 | DRIVE | 1 | | |
| 22 | | 96563 | END CAP | 1 | | |
| 23 | | 96565 | ARMATURE | 1 | | |
| 24 | | 96564 | END CAP | 1 | CUMMUTATOR W/SPRINGS AN | |
| 25 | 10 | 96566 | THRU BOLT | 1 | | |
| 26 | 10 | 42125 | SCREW, STARTER MOTOR ATT | 2 | | |
| 27 | 25 | 41604 2 | PLATE, BOTTOM COWL (MERCU | 1 | | |
| 27 | 25 | 41604 4 | PLATE, BOTTOM COWL (MARINE | 1 | | |
| 28 | 25 | 93527 | GROMMET, BOTTOM COWL (RUI | 1 | | |