



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	1599	9157	DRIVE SHAFT HOUSING	1		
2	10	95362	SCREW, DRIVE SHAFT HOUSING	2		
3	12	95303	WASHER, HOUSING SCREW	2		
4	12	95349	WASHER, HOUSING SCREW	2		
5		95276	CARRYING HANDLE	1		
6	10	95366	BOLT, CARRYING HANDLE	2		
7	11	95367	NUT, CARRYING HANDLE BOLT	2		
8	10	95340	SCREW, DRIVE SHAFT HOUSING	6		
9	27	95341	GASKET, DRIVE SHAFT HOUSING	1		
10		95273	STEERING HANDLE	1		
11	10	95363	SCREW, STEERING HANDLE	1		
12		95275	PLATE, STEERING HANDLE	1		
13	22	95364	DAMPER, RUBBER	2		
14		95274	GRIP, STEERING HANDLE	1		
15	3406	9159	CLAMP BRACKET	2		
16	10	95373	SCREW, CLAMP BRACKET	1		
17	12	95375	WASHER, CLAMP BRACKET SCR	2		
18	11	95374	NUT, CLAMP BRACKET SCREW	1		
19		95278	BRACKET, THRUST	1		
20	10	95376	SCREW, THRUST BRACKET	1		
21	12	95349	WASHER, BRACKET SCREW	2		
22	11	95377	NUT, BRACKET SCREW	1		
23	10	95378	THUMB SCREW ASSEMBLY	2		
24	12	95379	WASHER, THUMB SCREW	2		
25	3407	9160	SWIVEL BRACKET (3407-811204)	1		
26	10	95380	SCREW, SWIVEL BRACKET	4		
27	23	95381	BUSHING, SWIVEL BRACKET	2		
28	10	95382	SCREW, ADJUSTING	1		
29	24	95383	SPRING, ADJUSTING SCREW	1		
30		95279	PAD, FRICTION	1		
31	11	95397	NUT, STEERING HANDLE	1		
32	12	95349	WASHER, ADJUSTING SCREW	1		