



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		95244	STARTER HOUSING	1		
2	10	95396	SCREW, STARTER HOUSING	2		
3		95251	PLUG, STARTER HOUSING	1		
4	50	12066A 9	STARTER ROPE	1		
5		95249	HANDLE, STARTER ROPE	1		
6	24	95284	SPRING, RECOIL	1		
7		95245	STARTER SHEAVE	1		
8		95246	RATCHET	1		
9	24	95315	SPRING, FRICTION	1		
10		95247	COVER	1		
11	24	95316	SPRING, RETURN	1		
12		95248	FRICTION PLATE	1		
13	12	95317	THRUST WASHER	1		
14	53	95318	E-RING	1		
15		95250	PULLEY, STARTER	1		
16	10	95319	SCREW, STARTER PULLEY	1		
17	12	95320	WASHER, PULLEY SCREW	3		
18	262	9155	FLYWHEEL MAGNETO ASSEMBL	1		
19	262	9184	FLYWHEEL	1		
20		95237	BREAKER	1		
21	10	95311	SCREW, BREAKER	1		
22		95241	EXCITER COIL	1		
23	10	95313	SCREW, EXCITER COIL	1		
24		95240	CONDENSER	1		
25	40	95312	SCREW, CONDENSER	1		
26		95239	BASE, MAGNETO	1		
27	10	95310	SCREW, MAGNETO BASE	2		
28		95242	IGNITION COIL	1		
29	10	95314	SCREW, IGNITION COIL	2		
30	12	95320	WASHER, IGNITION COIL SCREW	2		
31	33	95297	SPARK PLUG (CHAMPION RL-87)	1		
32	85	95282	CAP, SPARK PLUG	1		
33	87	95283	STOP SWITCH ASSEMBLY	1		