



				Parts List		
Ref	Class	Part	Description	Qty	Comment	Footnote
1	1668	9158	GEAR HOUSING ASSEMBLY	1		
2	30	95342	BALL BEARING, DRIVE SHAFT	1		
3	23	95343	SPACER	1		
4	30	95344	BALL BEARING, DRIVE SHAFT	1		
5	53	95345	SNAP RING, BALL BEARING	1		
6		95271	ANODE	1		
7	10	95346	SCREW, ANODE	1		
8	22	95368	PLUG, OIL	2		
9	27	95220	GASKET, OIL PLUG	2		
10	30	95347	BALL BEARING, PROPELLER SH	1		
11	30	95344	BALL BEARING, PROPELLER SH	1		
12	26	95348	OIL SEAL, PROPELLER SHAFT	1		
13	46	95287	WATER PUMP	1		
14	25	95288	O-RING, WATER PUMP	1		
15	47	95289	IMPELLER	1		
16		95272	COVER, GEAR HOUSING	1		
17	10	95302	SCREW, COVER	2		
18	12	95349	WASHER, COVER SCREW	2		
19	26	95350	OIL SEAL, DRIVE SHAFT	1		
20	32	95359	WATER TUBE ASSEMBLY	1		
21	25	95360	GROMMET, WATER TUBE (UP)	1		
22	23	95361	BUSHING, WATERTUBE (LOWE)	1		
23	45	95290	DRIVE SHAFT (UPPER)	1		
24	45	95369	DRIVE SHAFT (LOWER)	1		
25		95277	PIPE, DRIVE SHAFT	1		
26	44	95291	PROPELLER SHAFT (WITH BEVE	1		
27	15	95292	SHIM, BEVEL GEAR	AR		
28	43	95293	PINION GEAR	1		
29	53	95370	SNAP RING, PINION GEAR	1		
30	28	95371	KEY, IMPELLER	1		
31	17	95372	SHEAR PIN, PROPELLER	1		
32	48	95294	PROPELLER	1		
33	18	95295	COTTER PIN, PROPELLER	1		