



21812

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		86617A13	STATOR ASSEMBLY	1		
2	10	40001 20	SCREW, (M5 x 25)	2		
2	10	40001 5	SCREW, (M5 x 10), STATOR ATT/	2		
3		98450A 5	TRIGGER ASSEMBLY	1		
4	54	24836	CLIP, TRIGGER LEADS	1	(Manual)	
4	54	22740	CLIP, TRIGGER LEADS	1	(Electric/Manual Alternator)	
5	10	48408	SCREW, (#10-16 x .500), CLIP TO	1		
6		69205	C WASHER, CLIP SCREW	1		
7	339	7370A13	IGNITION COIL ASSEMBLY	2		
8		99762	COVER, IGNITION COIL	1		
9	10	40105 55	SCREW, IGNITION COIL COVER	3		
10	11	45076	NUT, (#10-32), COIL TERMINAL	4		
11	84	813715A 3	HIGH TENSION LEADS	1		
11	84	813715A 2	LEAD CABLE SET, High Tension (E	1		
12	85	63709A 1	BOOT/TERMINAL KIT, SPARK P	2		
13	33	97180	SPARK PLUG (NGK #BUZHW)	2	(See Service Bulletin 91-36)	
13	33	14103570	SPARK PLUG (NGK #BUZHW-2)	2	(See Service Bulletin 91-36)	
13	33	13686 2	SPARK PLUG (NGK #BU8H)	2	(See Service Bulletin 91-36)	
13	33	816737 2	SPARK PLUG (NGK #BP8H-N-10)	2	(See Service Bulletin 91-36)	
13	33	816837 2	SPARK PLUG (NGK #BPZ8H-N-1C	2	(See Service Bulletin 91-36)	
14	339	7452A15	SWITCH BOX	1		
15	10	40019108	SCREW, (M5 x 20), SWITCH BOX	3		
17	84	88807A10	WIRE ASSEMBLY, AUXILIARY	2		
18	10	48408	SCREW, (#10-16 x .500), GROUND	1		
19		86704A 2	STATOR ASSEMBLY, AUXILIARY	1		
20	10	40001 23	SCREW, (M5 x 30), STATOR ATT/	3		
21	86	63813	TERMINAL BLOCK MARINER	1		
22	10	48409	SCREW, (#10-16 x .625), TERMIN	2		
23		95845	VOLTAGE REGULATOR	1		
24	10	92799	SCREW, (#10-16 x 1.12)	2		
25	11	45076	NUT, (#10-32)	2		
26	84	74725A 2	HARNESS ASSEMBLY (BLACK/RI	1		
27		71663	PLUG	1		
28	84	65017A 2	HARNESS ASSEMBLY (EXTERNAL	1		