

NO IMAGE

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
-	91	880118A 2	CARTRIDGE	1	SN# 0T979999 & Below	
-	91	880118A03	DDT CARTRIDGE	1	SN# 0T980000 & Up	
-	91	822560A 5	HARNES ASSEMBLY, DDT Adap	1	(ELECTRICAL/IGNITION)	
-	84	825003A 1	DDT CABLE (Electrical/Ignition)	1		
-	91	823686A 2	DIGITAL DIAGNOSTIC TESTER (E	1		
-	91	99750A 1	MULTI METER (Electrical/Ignition)	1		
-	91	52024A 1	SWITCH ASSEMBLY (Electrical/Ig	1		
-	91	59339	SERVICE TACHOMETER (Electric	1		
-	91	850439T 1	TESTER (Electrical/Ignition)[Eight (	1		
-	91	63998A 1	GAP TOOL (Electrical/Ignition)[Sing	1		
-	91	825824A 2	TACH INTERFACE MODULE (Elec	1		
-	91	99379	TIMING LIGHT (Electrical/Ignition)	1		
-	91	11230 1	ALIGNMENT TOOL (Trim/Tilt Syste	1		
-	91	99750A 1	MULTI METER (Trim/Tilt System)	1		
-	91	52915A 6	TEST GAUGE KIT (Trim/Tilt Syste	1		
-	91	74951	SPANNER WRENCH (Trim/Tilt Sys	1		
-	91	44487T 1	REMOVER TOOL, Trim Rod Guide	1		
-	91	44486A 1	REMOVAL TOOL, Trim Rod (Trim/'	1		
-	91	55919	SLEEVE (Powerhead)	1		
-	91	52344	HOLDER TOOL (Powerhead)	1		
-	91	849154T 1	PULLER ASSEMBLY (Powerhead)	1		
-	91	90455T 1	LIFTING EYE (Powerhead)	1	SN# 0T979999 & Below	
-	91	90455 1	LIFTING EYE (Powerhead)	1	SN# 0T980000 & Up	
-	91	93004A 2	LOCK RING INSTALLATION TOOL	1		
-	91	52952T 1	REMOVAL TOOL, Piston Pin Lock	1		
-	91	24697	EXPANDER TOOL, Piston Ring (P	1		
-	91	92973A 1	PISTON PIN TOOL (Powerhead)	1		
-	91	812549T	STAND, Powerhead (Powerhead)	1		
-	91	24161	CAP TOOL, Flywheel Puller (Power	1		
-	91	823237T	RING COMPRESSOR (Powerhead)	1		
-	91	66274	TORQUE WRENCH, (0-150 lb-in) (I	1		
-	91	37241	PULLER PLATE (Powerhead)	1		
-	91	881834A 1	GAUGE	1		
-	10	40073 25	SCREW, (M5 x 25)	1		
-	91	851980 2	SIZING TOOL	1		
-	91	851980 3	INSTALLATION CAP	1		
-	91	881833A 2	GAUGE, Air/Fuel Pressure	1	SN# 0T979999 & Below	
-	91	881833A03	GAUGE KIT, Air/Fuel Pressure	1	SN# 0T980000 & Up	
-	91	99750A 1	MULTI METER	1		
-	91	53459	ROD TOOL (Gear Housing)	1		
-	91	78472	INDICATOR TOOL, Rod Lock (Ges	1		