



1325

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
0	1623	859399T16	GEAR HOUSING ASSEMBLY, Con	1	[X-Long]	
0	1623	859399T17	GEAR HOUSING ASSEMBLY, Con	1	[XX-Long]	
1	1623	859399T18	GEAR HOUSING, Basic	1		
2	22	859403	PLUG	1		
3		823903	SHIFT CRANK	1		
4		19755T 7	SPOOL ASSEMBLY	1		
5		NSS	NOT SOLD SEPARATE, Spool	1		
6		NSS	NOT SOLD SEPARATE, Sleeve	1		
7	18	46950 1	COTTER PIN	1		
8	15	44491A 1	SHIM SET	AR		
9		828830A 2	BEARING ADAPTOR ASSEMBL'	1		
10	31	814653T	ROLLER BEARING	1		
11	12	815481	THRUST WASHER,	1		
12	31	815480	BEARING, Thrust	1		
13	43	828696T 2	GEAR, Reverse (12/21)	1		
14	31	15844	BEARING ASSEMBLY, Roller	1		
15	24	30893	SPRING	1		
16	52	859340T	CLUTCH	1		
17	17	30632	PIN, Cross	1		
18	17	828356	PIN, Detent	1		
19	44	824111	SHAFT, Propeller	1		
20	43	828695A 1	GEAR SET, Forward/Pinion (12/21)	1		
21	23	17615 14	SPACER SHIM, (.206)	AR		
21	23	17615 15	SPACER SHIM, (.208)	AR		
21	23	17615 16	SPACER SHIM, (.210)	AR		
21	23	17615 17	SPACER SHIM, (.212)	AR		
21	23	17615 18	SPACER SHIM, (.214)	AR		
21	23	17615 19	SPACER SHIM, (.216)	AR		
21	23	17615 20	SPACER SHIM, (.218)	AR		
21	23	17615 21	SPACER SHIM, (.220)	AR		
21	23	17615 22	SPACER SHIM, (.222)	AR		
21	23	17615 23	SPACER SHIM, (.224)	AR		
21	23	17615 24	SPACER SHIM, (.226)	AR		
21	23	17615 25	SPACER SHIM, (.228)	AR		
21	23	17615 26	SPACER SHIM, (.230)	AR		
22	31	815480	BEARING, Thrust	1		
23	12	815481	THRUST WASHER,	1		
24		828831A 3	BEARING ADAPTOR ASSEMBL'	1		
25	31	814653T	ROLLER BEARING	1		
26	12	18448	THRUST WASHER	2		
27	31	15844	BEARING, Thrust	2		