



				Parts List		
Ref	Class	Part	Description	Qty	Comment	Footnote
1	199	2092A 2	BOTTOM COWL ASSEMBLY (SEE	1,1,1		
2	37	33751	DECAL, CHOKE - STOP - FUEL	1,		
2	37	35746	DECAL, CHOKE - STOP - FUEL	,1,		
3		34046	LEVER, CLAMPING - PORT	1,1,1		
4		34045	LEVER, CLAMPING - STARBOARD	1,1,1		
5	53	30428	FASTENER, CLAMPING LEVER	2,2,2		
6	17	29077	PIN, ROLL - CLAMPING LEVER	2,2,2		
7	23	26819	BUSHING, NYLON - CLAMPING LI	2,2,		
7	23	26819	BUSHING, NYLON - CLAMPING LI	,,4		
8	23	31293	BUSHING, RUBBER - CLAMPING	2,2,2		
9	12	38744	WASHER, CLAMPING LEVER	,,2		
10	37	37793	DECAL, BOTTOM COWL - PORT	,,1		
11	37	37792	DECAL, BOTTOM COWL - STARB	,,1		
12	27	33515	GASKET, POWERHEAD TO BOT	1,1,1		
13	27	33499	GASKET, EXHAUST RELIEF COV	1,1,1		
14		33498	COVER, EXHAUST RELIEF	1,1,1		
15	10	35519	SCREW, EXHAUST RELIEF COVE	12,12,1		
--		33474A 1	STOP SWITCH ASSEMBLY	1,1,1		
16		33474	HARNES, STOP SWITCH	1,1,1		
17	12	30856	WASHER, SEALING - STOP Sw	1,1,1		
18		30859	INSULATOR, SLEEVE - INNER	1,1,1		
19	24	30858A 1	SPRING AND CONTACT ASSEM	1,1,1		
20		30854	COVER, STOP SWITCH	1,1,1		
21	13	21972	LOCKWASHER, STOP SWITCH	1,1,1		
22	11	21971	NUT, STOP SWITCH CONNECT	1,1,1		
23		33541	SEAL, SOUND - BOTTOM COWL	1,		
23		35774	SEA, SOUND - BOTTOM COWL	,1,1		
24		28899	RETAINER, SOUND SEAL - REAF	1,1,1		
25		33728	RETAINER, SOUND SEAL - FORV	1,1,1		
26	54	28901	FASTENER, SOUND SEAL TO BO	9,9,9		
27	12	20546	WASHER, PORT CLAMPING LEV	1,1,		