



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	415	1180	CRANKSHAFT	1	SERIAL 00000000-01592567	
1	415	2295	CRANKSHAFT	1,1	SERIAL 01592568-09999999	
2	30	20464	BEARING, BALL - CRANKCASE (L	1,1,1		
3	26	31507	OIL SEAL, CRANKCASE (LOWER)	2,2,2		
4	23	33736	SPACER, PROTECTOR - CRANKS	1,1,1		
5	527	1947A 2	CENTER MAIN BEARING ASSEMI	1,1,1		
6	17	20032	DOWEL PIN, CENTER MAIN BE	10,10,1		
7	10	25313	SCREW, CENTER MAIN BEARIN	2,2,2		
8	11	29469	NUT, CENTER MAIN BEARING	2,2,2		
9	34	30303A 1	REED SET, CENTER MAIN BEAR	1,1,1		
10	34	32038	REED STOP, MAIN BEARING RE	4,4,4		
11	10	29465	SCREW, REED SOTP MOUNTING	4,4,4		
12	11	29469	NUT, REED STOP MOUNTING SC	4,4,4		
13	17	20032	DOWEL PIN, MAIN BEARING TO	1,1,1		
14	28	20094	KEY, FLYWHEEL	1,1,1		