



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	415	2295	CRANKSHAFT	1,1		
2	30	20464	BEARING, BALL - CRANKCASE(LC	1,1		
3	26	31507	OIL SEAL, CRANKCASE (LOWER)	2,2		
4	23	33736	SPACER, PROTECTOR - CRANKS	1,1		
5	527	1947A	CENTER MAIN BEARING ASSEMI	1,		
5	534	2497A	CENTER MAIN BEARING ASSEMI	,1		
6	17	20032	DOWEL PIN, CENTER MAIN BE	10,10		
7	10	25313	SCREW, CENTER MAIN BEARIN	2,2		
8	11	29469	NUT, CENTER MAIN BEARING	2,2		
9	34	30303A	REED SET, CENTER MAIN BEAR	1,		
9	34	20888A	REED SET, CENTER MAIN BEAR	,1		
10	34	32038	REED STOP, MAIN BEARING RE	4,4		
11	10	29465	SCREW, REED STOP MOUNTING	4,4		
12	11	29469	NUT, REED STOP MOUNTING SC	4,4		
13	17	20032	DOWEL PIN, MAIN BEARING TO	1,1		
14	28	20094	KEY, FLYWHEEL	1,1		