



Parts List					
Ref	Class	Part	Description	Qty	Footnote
	1627	2670A 3	GEAR HOUSING ASSEMBLY, COI	1	
	1627	2670A 4	GEAR HOUSING ASSEMBLY, COI	1	
	1627	2964A 4	GEAR HOUSING ASSEMBLY, COI		
	1627	2964A 3	GEAR HOUSING ASSEMBLY, COI		
1	1627	2670A 1	GEAR HOUSING ASSEMBLY	1	
1	1627	2964A 1	GEAR HOUSING ASSEMBLY		
2	17	20201	PIN, DOWEL - DRIVE SHAFT I	1,1	
3	16	30668	STUD, WATER PUMP TO GE	3,3	
4	16	33471	STUD, GEAR HOUSING TO D	1,1	
5	31	28157	BEARING, ROLLER - DRIVE S	1,1	
6	45	39374	DRIVE SHAFT (SHORT SHAFT)	1,1	
6	45	39375	DRIVE SHAFT (LONG SHAFT)	1,1	
7	43	33441	GEAR, PINION	1,1	
8	14	20806	TAB WASHER, PINION GEAR S	1,1	
9	10	20807	SCREW, PINION GEAR TO DRIP	1,1	
10	10	28634	SCREW, GREASE FILLER	1,1	
11	12	20260	WASHER, GREASE FILLER SCF	1,1	
12	10	29608	SCREW, GEAR HOUSING FLUS	1,1	
13	27	29586	GASKET, GEAR HOUSING FLU	1,1	4
14	26	29612	SEAL, GEAR HOUSING FLUSHI	1,1	4
15	10	28653	SCREW, GREASE VENT	1,1	
16	12	20262	WASHER, GREASE VENT SCRE	1,1	
17		33476A 1	SHAFT ASSEMBLY, SHIFT - LO	1,1	
17		33546A 1	SHAFT ASSEMBLY, SHIFT - LO	1,1	
18	25	38933	"O" RING, LOWER SHIFT SHA	1,1	4
19	53	30899	RING, RETAINING - SHIFT SHA	1,1	
20	23	30676A 1	BUSHING ASSEMBLY, SHIFT SI	1,1	
21	25	26802	"O" RING, SHIFT SHAFT BUSHI	1,1	4
22	26	30696	OIL SEAL, SHIFT SHAFT BUSHI	1,1	
23	10	39149	SCREW, SHIFT SHAFT BUSHIN	1,1	
24	15	20804A 1	SHIM, BALL BEARING TO GEAF	AR,AR	
25	30	20802	BEARING, BALL - DRIVE SHAFT	1,1	
26	53	33463	RING, RETAINING - BALL BEAR	1,1	
27	15	20804A 1	SHIM, GEAR HOUSING TO WA	AR,AR	
28	27	39626	GASKET, WATER PUMP BASE	1,1	4
29	25	33466	"O" RING, WATER PUMP BASE	1,1	4
30	46	39295A 1	WATER PUMP BASE ASSEMBL	1,1	
31	26	20070	OIL SEAL, WATER PUMP BAS	1,1	
32	26	33467	OIL SEAL, WATER PUMP BAS	1,1	
33	17	35973	PIN, DOWEL - WATER PUMP	2,2	
34	27	29626	GASKET, WATER PUMP BASE	1,1	4