



Parts List					
Ref	Class	Part	Description	Qty	Footnote
	1627	2670A 3	GEAR HOUSING ASSEMBLY, CO	1,	
	1627	2670A 4	GEAR HOUSING ASSEMBLY, CO	1,	
	1627	2964A 4	GEAR HOUSING ASSEMBLY, CO	,	
	1627	2964A 3	GEAR HOUSING ASSEMBLY, CO	,	
1	1627	2670A 1	GEAR HOUSING ASSEMBLY SE	1,	
1	1627	2964A 1	GEAR HOUSING ASSEMBLY SI	,	
51		33436	CAM, SHIFT	1,1	
52		33438	FOLLOWER, CAM	1,1	
53	24	33479	SPRING, CAM FOLLOWER	1,1	
54		46147	PLATE, ANODIC - GEAR HOUSI	,	
55	10	29081	SCREW, ANODIC PLATE TO GE	,	
56	15	20788A 1	SHIM, BALL BEARING TO GE	AR,AR	
56	43	33447A 2	FORWARD GEAR ASSEMBLY, C	1,1	
57	30	25398	BEARING, BALL - FORWARD	1,1	
58	43	33447A 1	FORWARD GEAR ASSEMBLY	1,1	
59	31	28157	BEARING, ROLLER - FORWARD	1,1	
60	52	33443	RATCHET, SLIDING CLUTCH	1,1	
61	17	33433	PIN, CROSS - RATCHET TO PR	1,1	
62	53	33430	RING, RETAINING - CROSS PIN	1,1	
63	44	34238A 2	PROPELLER SHAFT ASSEMBL\	1,1	9
63	43	33444A 2	REVERSE GEAR ASSEMBLY, C	1,1	
64	43	33444A 1	REVERSE GEAR ASSEMBLY	1,1	
65	30	25398	BEARING, BALL - REVERSE G	1,1	
66	12	33434	WASHER, THRUST - REVERSE	1,1	
67	15	33431A 1	SHIM, THRUST WASHER TO G	AR,AR	
68	25	33465	"O" RING, BEARING CARRIER	1,1	4
69		33402A 1	BEARING CARRIER ASSEMBLY	1,1	
70	31	28157	BEARING, ROLLER - BEARIN	1,1	
71	26	27163	OIL SEAL, BEARING CARRIER	1,1	
72	26	26805	OIL SEAL, BEARING CARRIER	1,1	
73	12	33432	WASHER, GEAR HOUSING CO	1,1	
74		33410	COVER, GEAR HOUSING	1,1	
75	23	34237	COLLAR, GUIDE - PROPELLER SI	1,1	
76	48	33480A 1	PROPELLER ASSEMBLY(2 BLAD	1,1	#
76	48	34402A 1	PROPELLER ASSEMBLY (2 BLAD	OPT,OI	
76	48	33482A 1	PROPELLER ASSEMBLY (3 BLAD	OPT,OI	
76	48	37316A 1	PROPELLER ASSEMBLY (3 BLAD	OPT,OI	
77	23	27024	SPACER, SPLINE - PROPELLER	1,1	
78	12	27025	WASHER, PROPELLER NUT	1,1	
79	11	22178	NUT, PROPELLER RETAINING	1,	
79	11	46255	NUT, PROPELLER RETAINING	1,	